

3xLOGIC

3xLOGIC VISIX Gen III Cameras

User Interface Guide

Ver. 1.1 / 2021.08



Simple. Scalable. Secure.

Table of Contents

Adding a VISIX Gen III Camera to VIGIL - Pt. 1	4	Record Configuration	55
Adding a VISIX Gen III Camera to VIGIL - Pt. 2	5	Recording List	56
All-in-One (Standalone) Setup	6	Setup - Record Setup	57
Viewing a Camera in VIGIL Client	7	Recording Video	57
3xLOGIC Camera Setup Utility	8	Storage Configuration	58
Main Screen - Change Password	9	Storage Configuration	59
Main Screen	10	IP Address Filter Configuration	61
Browser Interface -	11	RTSP Authentication Configuration	62
Video Configuration	12	IEEE 802.1X Configuration	63
Video Configuration	13	HTTPS Configuration	64
Video Configuration	14	Certificates Configuration	66
Video Configuration	15	Service Configuration	67
OSD Configuration	16	System Information	68
Region of Interest Configuration	17	System Diagnostics	69
Audio Configuration	18	Firmware Update	70
Smart Stream RC Configuration	19	Date & Time Settings	71
Setup - Video & Audio Setup -	20	DST Settings	72
Privacy Mask Configuration	21	Users Management	73
Profile Configuration	22	System Log	74
Camera Image Adjustment	23	Language	75
Camera Exposure Settings	24	Factory Reset	76
Camera Day & Night Settings	25	Restart	77
Camera Backlight Settings	26		
Camera White Balance	27		
Camera Image Enhancement	28		
Video Enhancement	29		
Network Status	30		
Network Settings	31		
WiFi Settings	32		
Setup - Network Setup	33		
ONVIF Settings	34		
UPNP Settings	35		
DDNS Settings	36		
FTP Settings	37		
SMTP Settings	38		
SNMP Settings	39		
RTSP Information	40		
Action Rules Configuration	41		
Action Rules Add / Modify	42		
Image Transfer Configuration	43		
Relay Out Configuration	44		
Event Rules Configuration	45		
Event Rules Configuration	46		
Schedule Configuration	47		
Motion Detection Configuration	48		
Temperature	49		
Alarm Configuration	50		
Temperature Alarm Configuration	51		
Temperature Alarm Configuration	52		
Temperature Alarm Configuration	53		
Record Management	54		

Legal and Safety



a. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment

generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful

interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will

be required to correct the interference at his own expense.

b. This device complies with CAN ICES-3 (A)/NMB-3(A)

c. This device is UL and ULC E467574 (Safety) certified.

d. This device complies with CE 2014/30/EU – EMC Directive, 2015/863/EU RoHS3 as part of 2011/65/EU RoHS

e. This device complies with WEEE

For safety instructions, please refer to your camera's quick start guide, which features all safety information as well as steps for physical installation. Documentation for individual cameras is available at www.3xlogic.com.


Quick Start- Adding a VISIX Gen III Camera to VIGIL - Pt. 1

Please follow the steps below to identify a camera on your network and add the camera to VIGIL Server. Please be certain to install the latest available firmware for your camera from <https://www.3xlogic.com/resource/software-download-center>. Instructions on firmware installation are available in section "Setup - System Setup - Firmware Update".

1 Connect the IP Camera and PC to the configured network.


2 Before adding a camera to VIGIL Server, a firewall rule must be created for new camera detection utility. This can be easily performed using the VIGIL Firewall Utility:

- Open the Windows Start menu and navigate to Programs>VIGIL>Utilities >Firewall Utility.
- After the firewall utility launches, check the box for VSXIPSetup Utility.
- Click Create Rule(s).
- A firewall rule for the utility will be created.

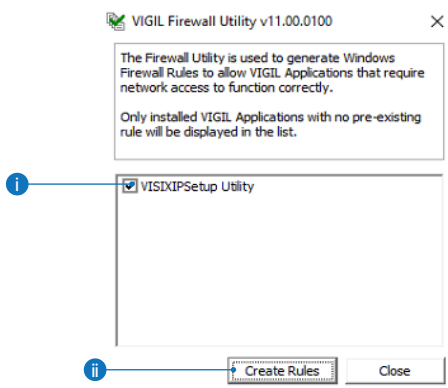


3 Adding the Camera to VIGIL Server -After creating the appropriate firewall rule, the camera can now be added to VIGIL Server. To begin:


- Update the system to VIGIL Server v11.00.0100 or newer. If updating to v11 series is not possible, alternative details are provided in the applicable steps below.
- Download the latest version of the 3xLOGIC Camera Detection (VISIXIPUtility.exe) from www.3xlogic.com and install it on the VIGIL Server system. Confirm a firewall rule for the utility has been created, as instructed in the previous section.
- Launch VIGIL Server, open settings (right-click Server tray icon, click Advanced Settings, login and the Camera Setup tab opens by default), select an available camera channel from the available list and open the Network Camera Settings form.

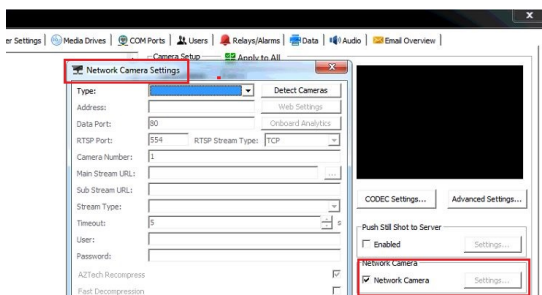

- For v11 series systems, select 3xLOGIC VISIX-IP-B in the Type drop-down. For pre-v11 series systems, select RTSP in the Type drop-down.
- Set the RTSP Stream Type as TCP

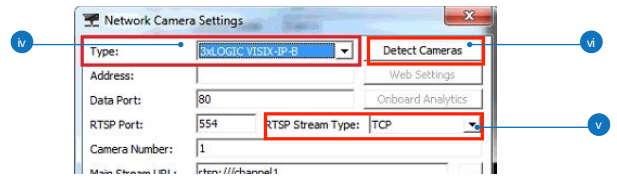


- For VIGIL 11 series systems, click the Detect Cameras button to start the 3xLOGIC Camera Setup Utility. For Pre 11 systems, launch the utility from Start>Program Files> VIGIL > VISIXIPUtility.exe.

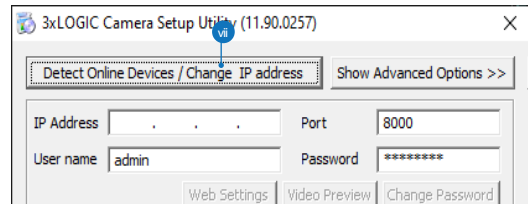

- Before proceeding, be certain your VIGIL Server and VISIX Cameras are on the same network. After deploying the utility, click the **Detect Online Devices / Change IP Address** button. A list of detected devices will be deployed. The default IP mode for GEN III VISIX models is DHCP. If a static IP is necessary, return to this portion of the utility and use the Change IP Address section to change the IP **AFTER** changing the camera password in the preceding steps of this section. Before continuing, the camera must be activated by changing its administrative password from its default to ensure your camera's data is secure. VIGIL Server cannot stream video from the camera if the password is not changed. This is to ensure best security practices. Password setup can be performed from the utility or in the camera's browser UI. Choose one of the following options:

WARNING: *IMPORTANT* VIGIL Server cannot stream video from the camera if the admin password is not changed. This is to ensure best security practices. Always change default device credentials.

- To change the password in the utility, select the camera from Devices list and click **Next**. The utility will return to the main page. Enter in the default username and password admin/admin, click connect and then click the Change Password button and follow the on-screen prompts. When finished, skip to Step viii of this section.

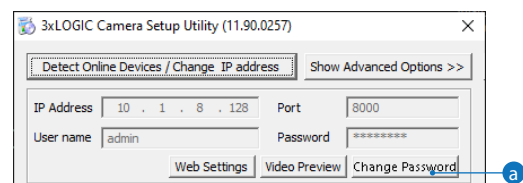

- To change the password from the browser, see instructions in "Browser Interface - Main Screen (Change Password)" section of this guide.

- The process for finalizing the addition of a camera to Server varies between v11 systems and pre-v11 systems. See 'a' below for instructions on v11 series and newer systems. See 'b' below for instructions on saving the camera to pre-v11 series VIGIL Servers.

Quick Start -

Adding a VISIX Gen III Camera to VIGIL - Pt. 2

- a. On VIGIL 11 series systems, select the camera from the utility list, click Save to apply any new settings to the camera then click Save to VIGIL. Camera information (highlighted in the below screenshot) will be automatically added to the camera's Network Settings form in VIGIL Server.

The screenshot shows the 'Network Camera Settings' dialog box. The following fields are highlighted with red boxes:

- Type: 3xLOGIC VISIX-IP-B
- Address: 192.168.11.208
- Main Stream URL: rtsp://192.168.11.208/channel1
- Sub Stream URL: rtsp://192.168.11.208/channel2
- Stream Type: RTSP H264/H265 Main Stream
- User: admin
- Password: [masked]

- xi. After the utility has auto filled the fields, or you have manually entered the information, click the OK button. Set the Recording Speed fields to Set by Camera and click OK or Apply. The camera will now be saved to VIGIL Server.

Your Camera should now be added to VIGIL Server and should begin recording via motion detection automatically. View live, playback and more via VIGIL Client. See "Quick Setup - Viewing the Camera in VIGIL Client" for more information.

Troubleshooting Tips

■ Failure to Save Camera to VIGIL Server

Login to the camera and confirm the default username and password have been changed. In keeping with modern security practices, the camera cannot be added to VIGIL Server with the default credentials in place.

Be certain to install the latest available firmware available for the camera at the 3xlogic.com [Software Download Center](#).

■ - Delay, Frame Skipping When Live Viewing in VIGIL Client / VIGIL Server System High CPU Usage

Adjust the camera's codec and resolution in the camera's browser UI. This can be especially helpful when cameras are interfaced with older VIGIL Server systems. See [SB 200008](#) for more information.

- b. On pre-v11 series systems, the information in the utility must be used to manually fill out the Network Camera settings form in VIGIL Server. Use the IP address and other available info for the camera in the detection utility to fill out the following fields in the Network Camera Settings form:

- **Type:** RTSP. (this setting was configured earlier in this section, but be sure to confirm).
- **Address:** Enter the IP address of the camera as displayed in the detection utility.
- **Main Stream URL:** rtsp://IP.ADDRESS/channel1
- **Sub-Stream URL:** rtsp://IP.ADDRESS/channel2 (this field may be greyed out if the Substream box has not been toggled on).
- **Stream Type:** H264/H265
- **User:** admin
- **Password :** Use the new password you configured earlier in this section.
- **Sub Stream -** Toggle this box to enable substream.

The screenshot shows the 'Network Camera Settings' dialog box. The following fields are highlighted with red boxes:

- Type: RTSP
- Address: 10.10.10.10
- Main Stream URL: rtsp://10.10.10.10
- Sub Stream URL: rtsp://10.10.10.10
- Stream Type: H264/H265
- User: admin
- Password: [masked]
- Sub Stream:

Quick Start - All-in-One (Standalone) Setup

Some VISIX Gen III Cameras can be used as a standalone All-in-One (edge) device when the appropriate licensing is purchased. If your camera is licensed as a standalone device at time of purchase, see the below steps for setup instructions. If the license was purchased separately of the camera, apply the license and install any necessary plugins (as instructed by your 3xLOGIC sales representative) before continuing.

- 1 Connect your camera to your network using its RJ-45 Ethernet port.
- 2 Download and install the VISIX Tech Setup app on your Apple or Android mobile device.
- 3 Open the app and choose to setup a new device. Enter in the requested installer information and tap **Continue** to proceed.
- 4 Choose the Option to **Scan QR code** and scan the QR code label on the camera.
- 5 The connection information for the camera will autofill. Proceed through the app and follow the instructions. Be sure to select **VISIX Gen III** as the device type when prompted. Fill in necessary information and click **Next** to proceed.
- 6 Follow the remaining instructions in the app to complete image preview and remaining setup of the camera as desired. Installing Technician information will be saved and emailed to the entered e-mail address for archival purposes.
- * The app can be used to reconfigure existing cameras in the future if necessary.


For more information on operating the VISIX Tech Setup mobile app, see G 150025 VSXSetup Tech Utility Quick Guide. Request the latest copy from your 3xLOGIC representative.



Quick Setup - Viewing a Camera in VIGIL Client


After adding a camera to VIGIL Server, or settings the camera up as a standalone All-in-One device, 3xLOGIC recommends VIGIL Client for viewing live and playback. Client's powerful tool set can be leveraged by users to thoroughly and quickly review camera footage and other data collected by a VIGIL Server. After adding a VIGIL Server to VIGIL Client, refer to the steps in this section for details on viewing the camera's footage in VIGIL Server.

- 1 After launching VIGIL Client, extend the Servers node located in the Sites tab treeview then double-click the desired VIGIL Server . all-in-One camera to reveal available devices and tools.
- 2 Expand the Camera node to reveal the VIGIL Server's cameras or the all-in-one device
- 3 Double-click the desired camera. The camera's live stream will be automatically displayed in the viewing area.
- 4 Live Edge Controls instantly grant the user access to common tools such a Capture Still Image, Instant Replay and Stream Type Selection.
- 5 Stream information such as FPS rate, bitrate and CODEC type are listed when the cursor hovers over the bottom edge of the frame.

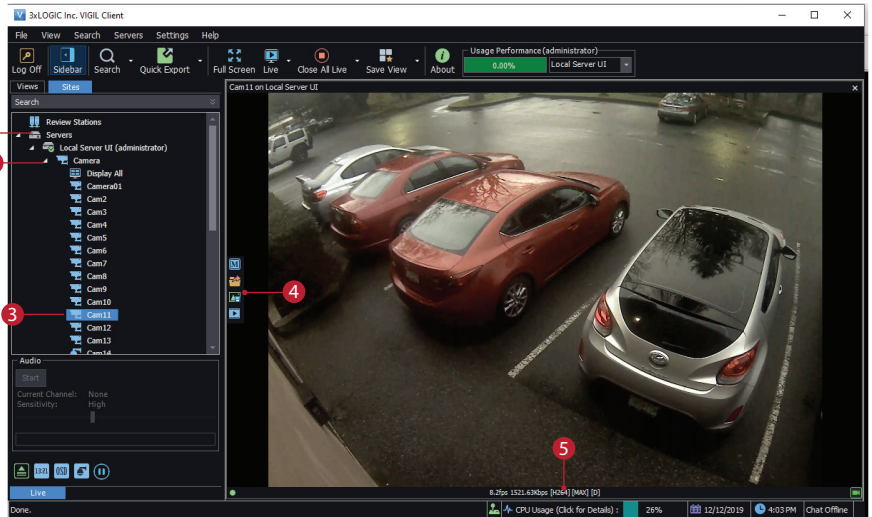


Select Instant Replay from the Live Edge Controls to open the last 5 minutes of footage from the camera or perform a playback search to review a custom timerange of playback. A Playback viewer featuring the requested footage will deploy.

- 1 Playback Left-Edge controls include Export Video or Stills, Stream Mode Selection and Screen Record, etc...
- 2 Right-Edge Controls include more tools such as Smart Search, Audio and Zoom Controls and Image Control.
- 3 Stream information and standard playback controls are accessible at the bottom of the frame.
- 4 Located next to the scrub bar, footage markers and export tools can be used to quickly narrow down and export portions of interest within larger video clips

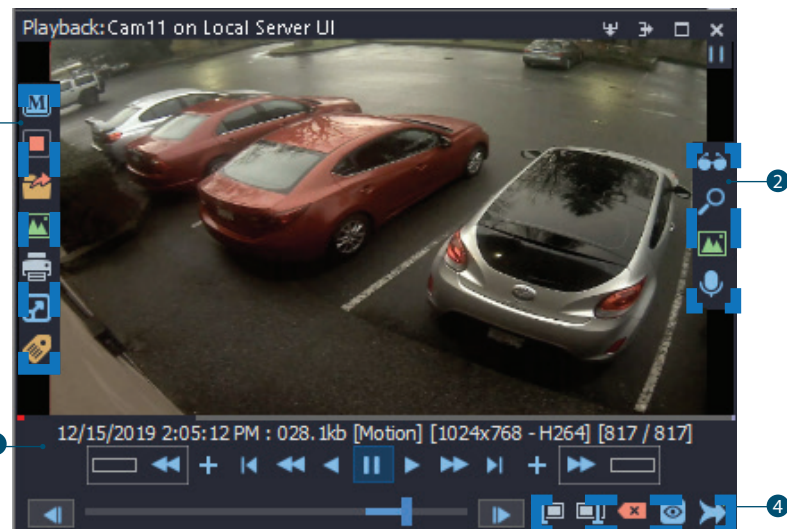

For further details on reviewing and exporting playback and other advanced features such as audio recording and two-way audio talk, POS Data OSD and more, please visit www.3xlogic.com and consult the product documentation library for VIGIL Client-related support documentation. Visit 3xLOGIC University at <https://www.3xlogic.com/training> and education.

Setup Tools - 3xLOGIC Camera Setup Utility

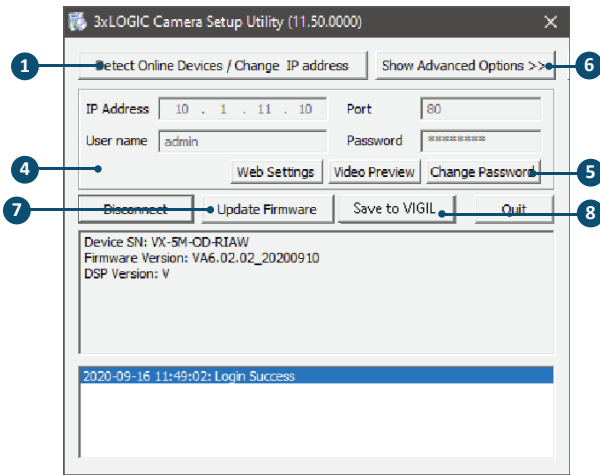

When adding the camera to a VIGIL Server, see this page for usage of the 3xLOGIC Camera Setup Utility.

1 Run the 3xLOGIC Camera Setup Utility


- Download and install the latest version of the utility at www.3xlogic.com.
- Navigate to Start > Programs > VIGIL>Utilities and launch the VIGIL Firewall Utility. Create a firewall rule for **VISIXIPSetup Utility** if one has not already been created.
- Launch VIGIL Server, navigate to Settings > Cameras.
- Select the desired camera channel from the treeview.
- Open Network Camera Settings and set the Type to **VISIX-IP-B**.
- Click the **Detect Camera** button. The utility will now launch with the *Detected Online Devices* window open.

2 Identify your camera. Select the desired camera from the list of devices.

3 Change IP Info (Optional for non-DHCP Environments). The camera will use DHCP by default and should be assigned an IP by your network automatically. If the network lacks DHCP and requires a static IP for the camera, click **Change IP Address** and edit the camera's IP info. Default username and password of *admin / admin* will be required to change IP info. Enter the credentials and click **Save IP Address** after making changes to save the new IP information.

- i** Default TCP/IP information (set after 90 seconds if no DHCP is detected).
- IP: 192.168.1.80
 - Subnet Mask: 255.255.255.0
 - Gateway: 192.168.1.1
 - DNS : 168.126.63.1

4 After making and saving any IP changes, confirm the camera is still selected in the devices list then click **Next**. The main utility window will now launch.

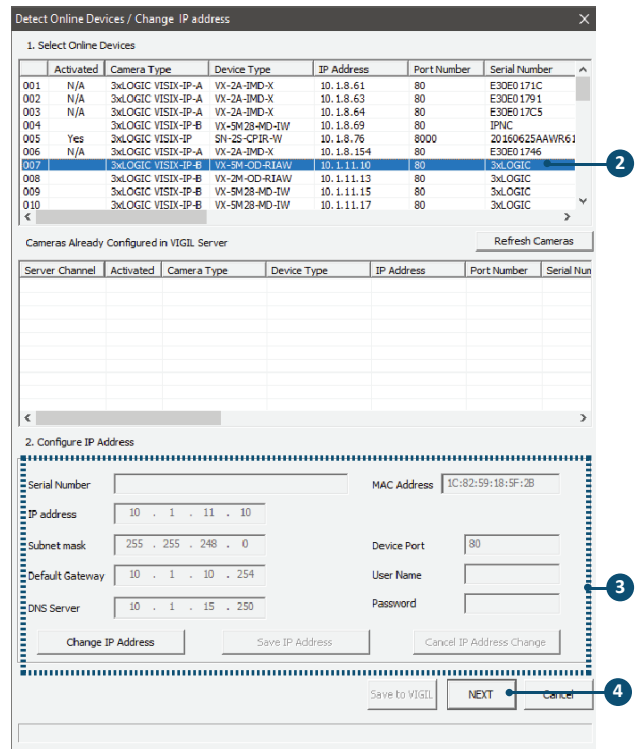

5 Change Password. After the main utility window launches with the camera selected, enter in the default username and password of *admin / admin* then click **Connect**. Once the utility states **Login Success**, click **Change Password**. A pop-up will deploy. Enter and confirm a unique password, then click **OK** to complete the change. A pop-up will confirm success.

i Default ID / PW : admin / admin

- ❗ The default user ID and password must be changed for security reasons. Video will not stream from the camera until the default admin password is changed. Enter the default credentials (admin / admin) and click **Change Password**. A pop-up will deploy. Enter and confirm a unique password, then click **OK** to complete the change.

- ❗ The ID and PW will be set to defaults when a 'factory reset' is performed on the camera.

6 Show Advanced Options (Optional). Click **Show Advanced Options** to edit video stream (main stream, sub stream) settings for the camera.


7 Update firmware (Optional). If you have the latest firmware file downloaded (contact 3xLOGIC support for latest available firmware), click **Update Firmware**, locate the firmware file on your system and click **Open**. The utility will install the firmware on the camera.

8 Finalizing Setup - Add to VIGIL Server. If adding the camera to VIGIL Server software, click **Save to VIGIL**. The camera will occupy the camera channel you selected in Step 1 (iv) of this section

* **Rebooting or Resetting a Camera to Factory Settings**

If a factory reset is required, login to the camera's browser interface (enter IP into a browser URL bar and login to the camera) then navigate to Setup > System > Factory Reset. To perform a basic camera restart, Navigate to Setup > System > Restart.



Browser Interface - Main Screen - Change Password

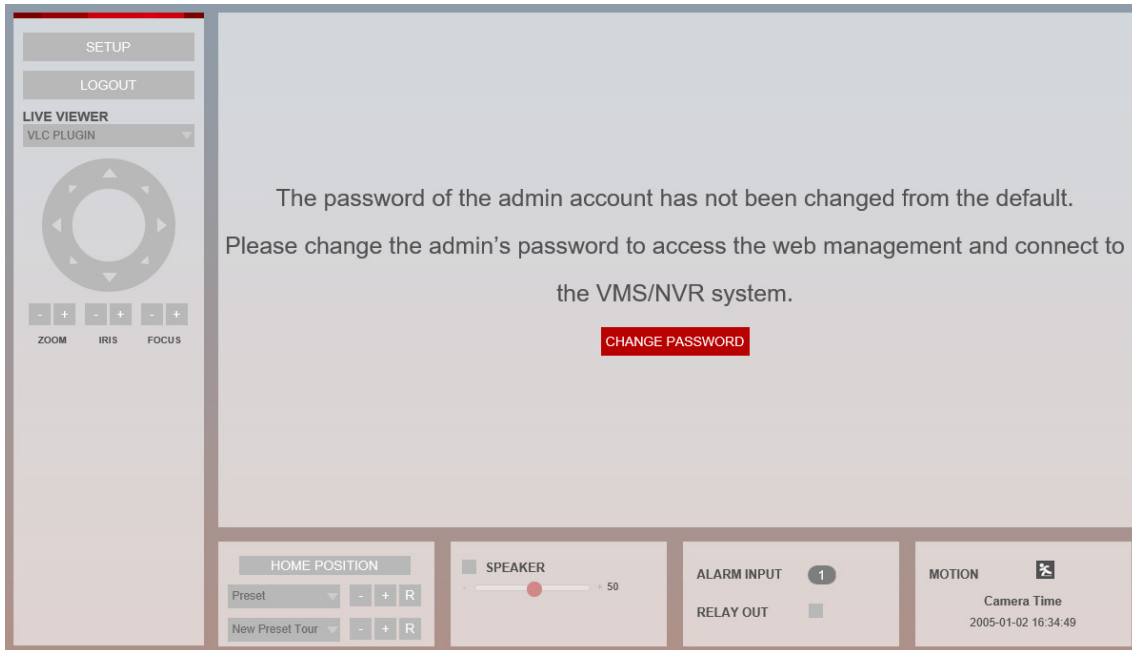


Password change is required at initial connection when the camera is new from factory or when a factory reset has been performed. The password can be reset from the 3xLOGIC Camera Setup Utility-B, however, if the camera's browser UI is opened first, the user will be prompted on login to change the password. See below for instructions:

- 1 If the default password for the camera has not previously changed, no camera image will be visible and the Setup button will be disabled.
- 2 Change the password by filling in a new password (password guidelines provided. See screenshot below) and clicking the CHANGE PASSWORD button.

- 3 After changing the password, you must re-login. If no input is received, a time expiry pop-up will deploy also asking for a re-login. In either case, click RE-LOGIN and enter the credentials to log back into the camera's interface.

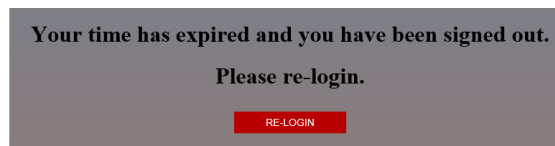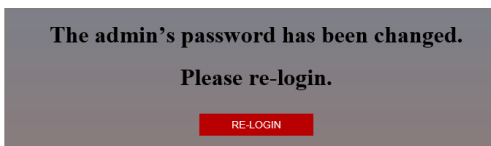

Browser Interface - Main Screen

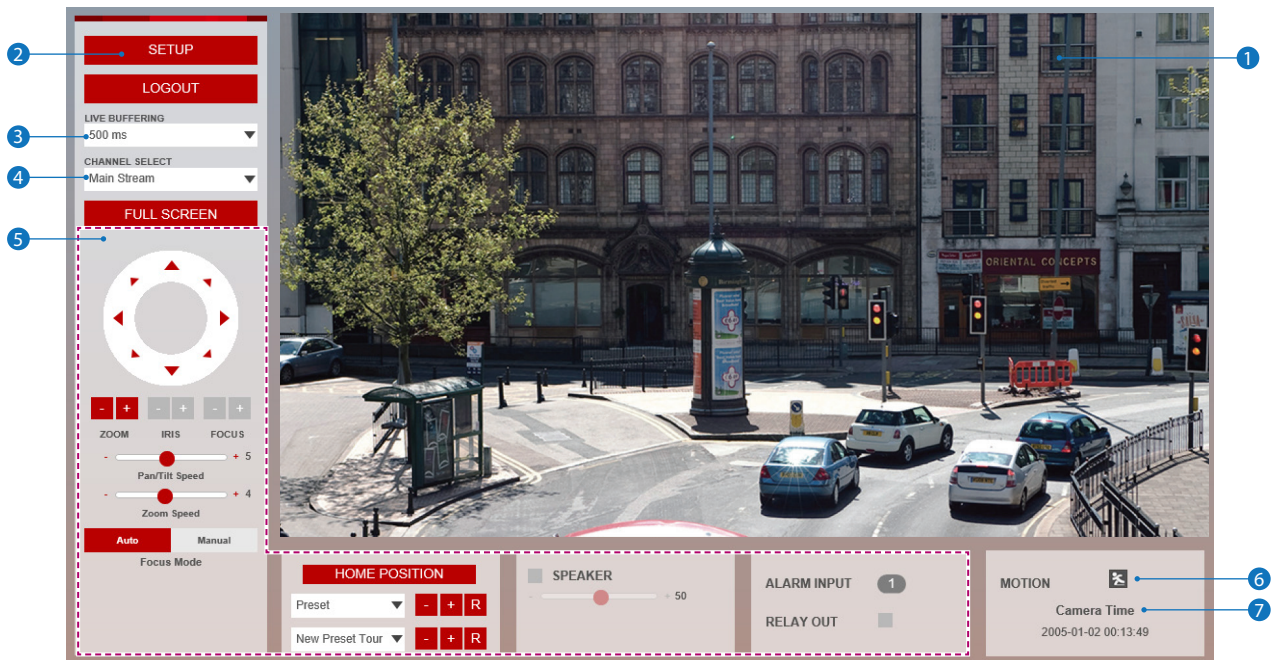

⊠ Web viewer is optimized with Internet Explorer 10 or newer versions and Firefox.

⊠ If VLC is not installed or VLC plugin is not supported (Chrome), Live buffering and Channel select menus will be changed to a Live Viewer menu. If HTML5(MJPEG) is selected on Live Viewer menu, then video can be checked.

1 Live video display.


2 Setup button. Click it to open the Setup page to setup and configure settings for the camera like Video, Network, Events, System Settings, etc... See 'Setup' section for more details.

3 Configure the Live buffering value to increase or decrease the buffering delay. The longer the delay, the smoother the image will remain during periods of high network activity or CPU usage.

4 Channel Select button. Select one of the camera's available streams to display it in the live viewer

⊠ Refer to 'Setup > Video & Audio > Video' to customize the Video Stream settings.

Browser Interface - Main Screen - Cont'd

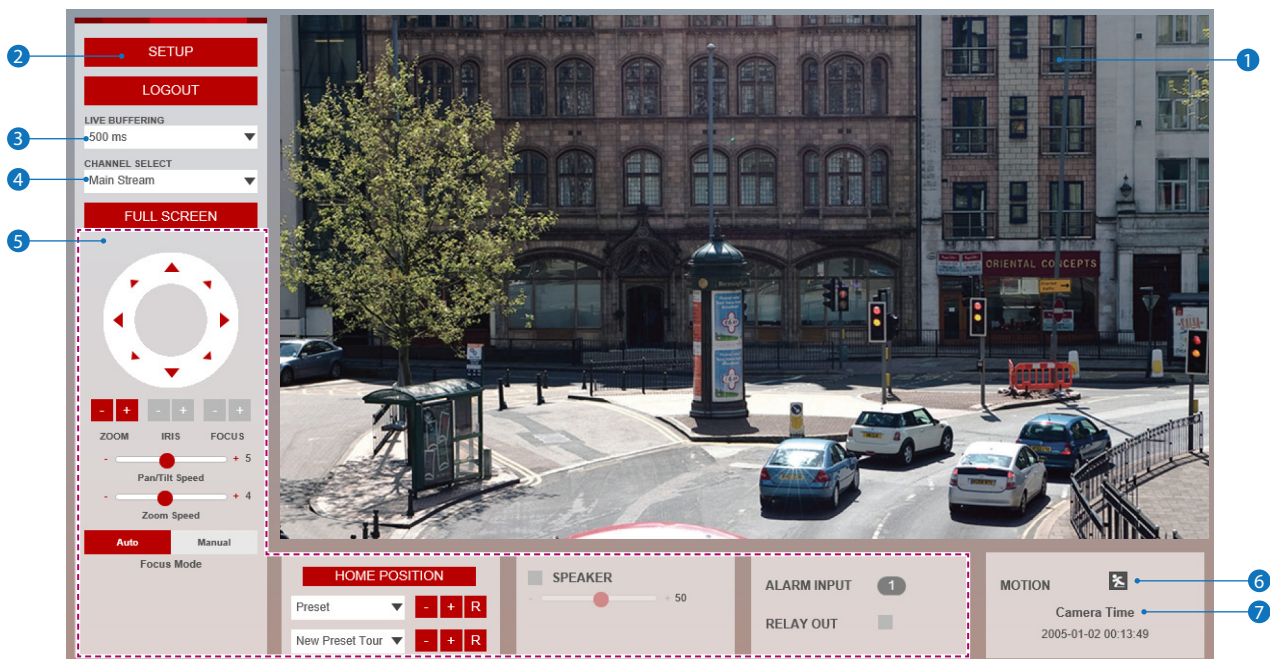

5 PTZ, Presets, Tours, Speaker / Audio Controls and Alarm controls are model-dependent and will only be accessible on applicable models.

PTZ Control - If using a PTZ-enabled model camera, PTZ motion can be controlled from this interface.

Home Position - Click this button to reset the PTZ to default home position.

Preset - You can add PTZ presets by clicking the + button when the camera is at the desired PTZ location. Up to 255 presets can be saved.

Please enter preset name.

Preset Tour - You can add a Preset Tour by clicking the + button and adding the desired PTZ presets you would like the camera to tour.

Up to 10 Tours can be saved.

Delay and Speed can be set from 1 to 10.

PRESET TOUR Preset Tour01 +

Index	Function	Delay:1-10(s)	Speed:1-10
1	[1]preset 001	1	1

Add Modify Delete

Speaker Control - Enable/Disable the Audio stream received from the camera. The system volume can also be set. Audio controls are only available for applicable models.

Alarm Input - Alarm input indicator. If an alarm is triggered, the corresponding input's color will be changed to red from gray.

Relay Out - Using these controls, you can read the status of the Relay Out switch and also set or reset it manually.

6 **Motion** -This indicator shows the Motion event status.

Event Alert Icon () appears if 'Motion Detection' is activated. Motion record is enabled by default.

7 **PIR (Not Pictured, Applicable Models Only)**- Display the the number of PIR Events recorded, up to a maximum of 99. Enable Toggle on **Auto Clear** to clear the counter after PIR Inactivity. Click **PIR Clear** to clear the counter or initialize a paused counter.

Setup - Video & Audio Setup

Video Configuration

The screenshot shows the 'VIDEO CONFIGURATION' interface. On the left, a sidebar menu is visible with 'VIDEO & AUDIO' selected. The main panel displays a table of streams and a configuration form for the selected stream (Stream 1).

Stream	Codec	Description
<input checked="" type="radio"/> 1	H.264	channel1
<input type="radio"/> 2	H.264	channel2
<input type="radio"/> 3	M-JPEG	channel3

Codec Configuration Form:


- Codec: H.264
- Description: channel1
- Resolution: 1920x1080
- Frame Rate(FPS): 30
- GOP: 30 [1 ~ 120]
- Profile: High
- Bitrate Mode: CBR
- Target Bitrate: 5120 [100Kbps ~ 10Mbps]
- Quality: 5 [1 ~ 10]
- Smart Bitrate Control: Off
- Extension Option: Off

Apply

- Details Pane**- When an item is selected from the menu, related items and settings will be visible in the Details pane.
- Setup Menu** - A list of configurable settings and information. Click a menu link to view related content. Some settings are model-dependent and will only be accessible for applicable models.
 - Video&Audio**
[VIDEO, OSD, ROI, AUDIO, PRIVACY MASK]
 - Camera**
[PROFILE, IMAGE ADJUSTMENT, EXPOSURE, DAY&NIGHT, BACKLIGHT, WHITE BALANCE, IMAGE, VIDEO]
 - Network**
[STATUS, NETWORK SETTING, AUTO IP, ONVIF, UPNP, DDNS, FTP, SMTP, SNMP, RTSP INFORMATION]
 - Trigger Action**
[ACTION RULES, IMAGE TRANSFER, RELAY OUT]
 - Events**
[EVENT RULES, SCHEDULE, MOTION, TEMPERATURE, ALARM]
 - Record**
[MANAGEMENT, RECORD LIST, STORAGE]
 - VCA**
[Enable]
 - Security**
[IP ADDRESS FILTER, RTSP AUTHENTICATION, IEEE 802.1x, HTTPS, CERTIFICATES, SERVICE]
 - System**
[INFORMATION, DIAGNOSTICS, FIRMWARE UPDATE, DATE&TIME, DST, USER MANAGEMENT, LOG, LANGUAGE, FACTORY RESET, RESTART, OPEN SOURCE]
 - PTZ**
[PTZ SETTINGS]

Setup - Video & Audio Setup

Video Configuration

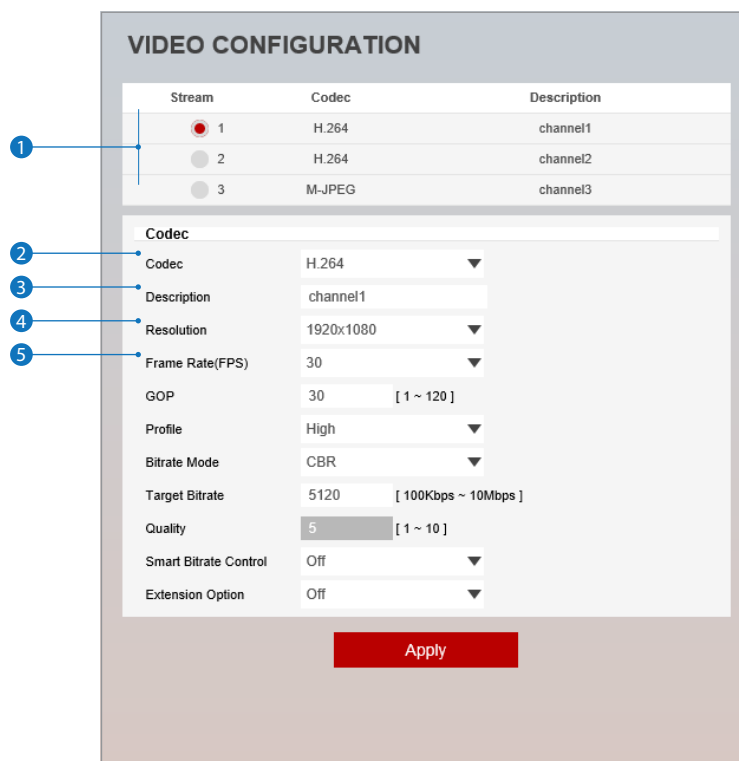

1 Live Video Channel Setup - Each available video stream can be configured to a variety of settings using any combination of the available codecs and resolutions. The amount of available streams will differ depending on the camera model. Toggle the button for the stream you would like to edit.

⚠ Camera performance should always be considered when configuring multiple channels / streams. Each active channel will cause additional strain on the camera's CPU. H.265 (HEVC) codec with higher bitrates may cause the unstable live streaming in the browser interface as well as within VIGIL Server / Client on older systems. See SB20008 for best practices on mitigating performance issues on older systems.

2 Codec - Choose the video codec. Subcategories will be changed automatically depending on the selected codec.

3 Description - Input a description for the selected channel / stream. Max. 30 alpha-numeric characters as well as special characters (including space) can be used.

4 Resolution - Select the video resolution.

⚠ Available resolutions will depend on the selected codec as well as the camera model's lens.

Example of common resolutions are listed below.

Format	QXSGA	3.7m	3m	1080p/i	720p/i	SVGA	VGA	4CIF	CIF
NTSC	2592 x 1944	2560 x 1440	2304 x 1296	1920x1080	1280x720	800x600	640x480	704x576 704x480	352x288 252x240
PAL	2592 x 1944	2560 x 1440	2304 x 1296	1920x1080	1280x720	800x600	640x480	704x576 704x480	352x288 252x240

5 Frame Rate - Select the maximum Frame Rate (FPS).

Setup - Video & Audio Setup

Video Configuration

Stream	Codec	Description
<input checked="" type="radio"/> 1	H.264	channel1
<input type="radio"/> 2	H.264	channel2
<input type="radio"/> 3	M-JPEG	channel3

Codec	
Codec	H.264
Description	channel1
Resolution	1920x1080
Frame Rate(FPS)	30
GOP	30 [1 ~ 120]
Profile	High
Bitrate Mode	CBR
Target Bitrate	5120 [100Kbps ~ 10Mbps]
Quality	5 [1 ~ 10]
Smart Bitrate Control	Off
Extension Option	Off

Apply

6 GOP(Group of Pictures) Size - Set up the number of p-frames (frames which contain only changed information based on the basic key frame or I-frame) in a GOP.

⚙️ **GOP(Group of Pictures) Size is..**

I-frame and P-frame can be created for MPEG4, H.264 and H.265 (HEVC) video compression. I-frame(key-frame) is essentially the whole image with all captured data for one specific scene of video. A P-frame is a frame based on the I-frame, but contains only data that is changed from the original I-frame. A GOP is made up of one I-frame and its corresponding several P-frames. To improve video quality, set the number of P-frames lower and to decrease image size, set the number of P-frames to a larger value.

7 Profile - The profile defines the subset of bit stream features in H.264, H.265 (HEVC) stream, including color reproduction and additional video compression.

⚙️ H.264 : Main, High / H.265 (HEVC) : Main

Main - An intermediate profile with a medium compression ratio. The main profile supports I-frames, P-frames, and B-frames.

High - A complex profile with a high compression ratio. The high profile supports I-frames, P-frames, and B-frames.

8 Bitrate Mode - Select the bit rate control scheme of video compression to CBR (Constant Bit Rate) or VBR (Variable Bit Rate).

CBR - To guarantee the designated constant bit rate, the quality of video is controlled in this mode. Therefore, the quality of video is likely to varying when network traffic is changing.

VBR - To guarantee the designated quality, the bit rate of video stream is changed in this mode. Therefore, the frame rate of video is likely to varying when network traffic is changing.

⚙️ This category will only appear for some codecs.

Setup - Video & Audio Setup

Video Configuration

Stream	Codec	Description
<input checked="" type="radio"/> 1	H.264	channel1
<input type="radio"/> 2	H.264	channel2
<input type="radio"/> 3	M-JPEG	channel3

Codec	
Codec	H.264
Description	channel1
Resolution	1920x1080
Frame Rate(FPS)	30
GOP	30 [1 ~ 120]
Profile	High
Bitrate Mode	CBR
Target Bitrate	5120 [100Kbps ~ 10Mbps]
Quality	5 [1 ~ 10]
Smart Bitrate Control	Off
Extension Option	Off

Apply

9 **Target Bitrate** - If Bitrate Control is set to CBR, you can set the Target Bitrate.

10 **Quality** - For VBR control mode, The target Quality of video can be setup (1 is low quality, 10 is higher quality)

11 **Smart Stream** - Off / Smart Stream RC / Smart Stream ETC (ATF). Available options will depend on the camera model. See the corresponding setup section for Smart.RC and Smart.ACF for more information.

12 **Extension Option**

Off - Turn off the Extension Option.

SVC-T On - The H.264, H.265 (HEVC) SVC (Scalable Video Coding) Extension is a video compression algorithm that enables effective and efficient transmission of video files over low bandwidth networks.

13 Click **Apply** to save new settings.

Setup - Video & Audio Setup

OSD Configuration

ON SCREEN DISPLAY(OSD) CONFIGURATION

1 **Date & Time**
 Off On
position X: 0 [0 ~ 100]
position Y: 0 [0 ~ 100]

2 **User Text**
 Off On
position X: 0 [0 ~ 100]
position Y: 0 [0 ~ 100]
Text: _____


3 **PTZ**
 Off On
position X: 0 [0 ~ 100]
position Y: 0 [0 ~ 100]

4 **Apply**

- 1 Date / Time** - Display the current time.
- 2 User Text** - Output the TEXT entered by the user. Supports a maximum of 30 characters.
- 3 PTZ** - Display PTZ information. This field is only visible on models with hardwired PTZ functionality.
- 4** Click **Apply** to save the above settings.


Setup - Video & Audio Setup

Region of Interest Configuration

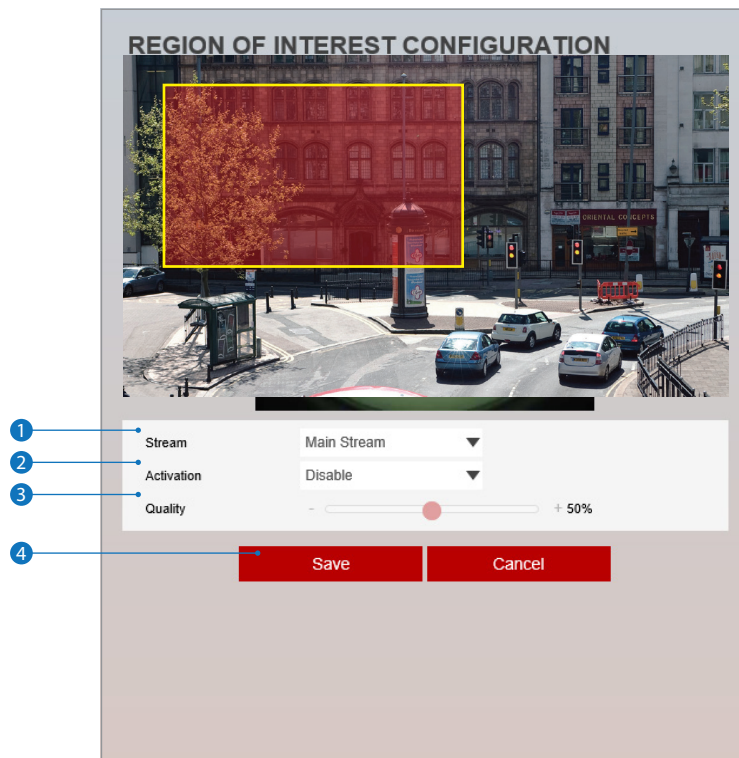

The Region of interest (ROI) function increases picture quality for an indicated area while maintaining lower quality for the rest of the image to help maintain bandwidth usage.

- 1 **Stream** - Select the Stream to apply the ROI to.
 - ⊗ ROI currently supports only H.264, H.265 (HEVC).
 - ⊗ The function is not supported with the MJPEG codec.

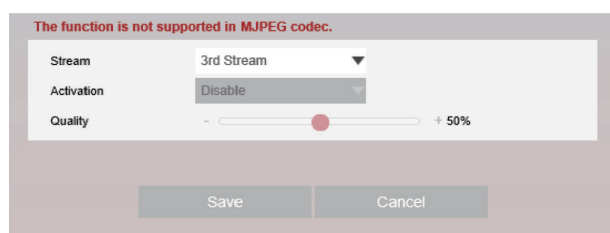

- 2 **Activation** - The Region of interest can be enabled or disabled here.
- 3 **Quality** - Set the quality of the set ROI area.
- 4 Click **Save** to save the current settings.
 - ⊗ Click 'Cancel' to return to the previous setting.

Setup - Video & Audio Setup

Audio Configuration

AUDIO CONFIGURATION

Audio Encode

1 Codec G.711 ulaw

2 Volume 5

3 Sample Rate 8,000 Hz

4 Save

- 1 **Codec** - Select the Audio Codec.
 - ⚠ Currently only G.71 is supported.
- 2 **Volume** - Set the Audio Volume from 0 to 10.
- 3 **Sample Rate** - Select the Audio Sample Rate.
 - ⚠ Currently only 8000 Hz is supported.
- 4 Click **Save** to save settings changes.

Setup - Video & Audio Setup - Smart Stream RC Configuration

SMART STREAM RATE CONTROL

General Setting

1 Stream Main Stream ▼

2 Stream Quality Low ▼

3 Dynamic GOP Off On

4 FPS Drop Off On

5 Apply

All menus for this configuration page can be activated by enabling *Smart RC* in the *Smart Stream* menu on the *Video Configuration* page.

- 1 **Stream** - Select the stream to apply Smart RC to. Main-stream and sub-stream are available.
- 2 **Stream Quality** - Select the desired stream quality. Low, Medium, High and Extreme are available.
- 3 **Dynamic GOP** - Select dynamic GOP to enable dynamic p-frame limits for GOP.
- 4 **FPS Drop** - Select to enable FPS drops when necessary meet image quality selection.
- 5 Click **Apply** to save new settings.

Setup - Video & Audio Setup - Smart Stream ETC (ACF) Configuration

SMART STREAM EVENT TRIGGERED CONTROL

General Setting


1	Stream	Main Stream
2	Frame Rate(FPS)	30
3	GOP	60
4	Bitrate Mode	CBR
5	Target Bitrate	4096
6	Hold On Time	10
7	Trigger Event	Motion
8	Apply	

Smart ETC allows specific stream settings to be used when a specific event occurs. ETC settings can be configured on this page. All menus are activated by enabling *Smart Stream ETC* in the *Smart Stream* menu located on the the *Video Configuration* page.

- 1 **Frame Rate** - Set the frame rate value to change to when the trigger event occurs.
- 2 **GOP** - Set the GOP value (P-frame limit) to change to when the event trigger occurs.
- 3 **Bitrate Mode** - Set to the birate mode to change to when the event trigger occurs.
- 4 **Target Bitrate** - Set the Target Bitrate to be set when the event trigger occurs.
- 5 **Hold on time** - Set the amount of time to keep the Smart Stream ETC settings active when a event trigger occurs (5-60 seconds).
- 6 **Trigger Event** - Select the event that will trigger Smart ETC settings to activate. Motion / Alarm Input / Motion and Alarm Input event triggers are available.
- 7 Click **Apply** to save new settings.

Setup - Video & Audio Setup

Privacy Mask Configuration

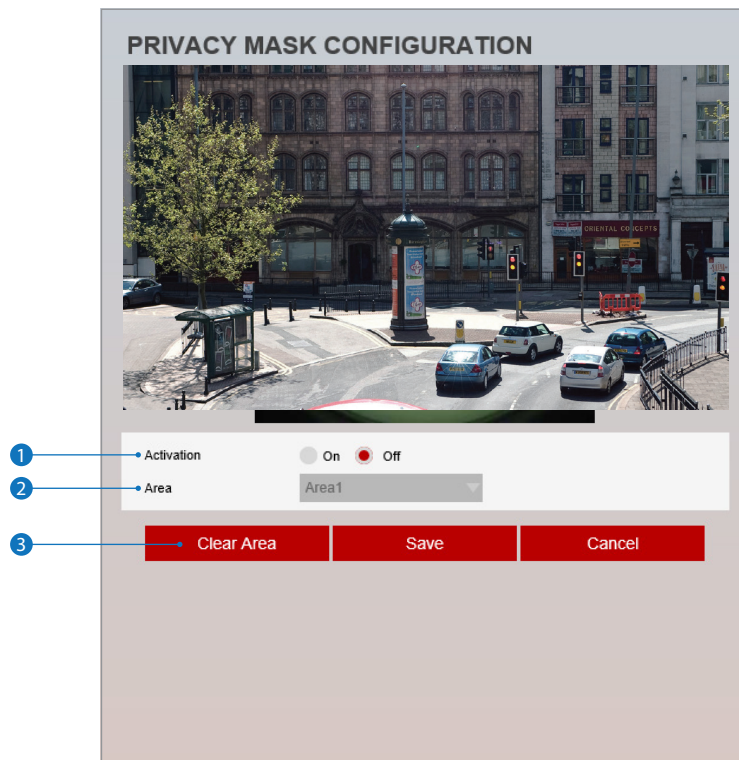


Use this function to mask areas that you want to hide on screen to protect privacy.

- 1 **Activation** - The Privacy mask function can be enabled or disabled here.
- 2 **Area** - Select an area designation (Area1 ~ Area16) and draw the privacy area.
- 3 Click **Save** to save the current settings.
 - ⊠ Click 'Cancel' to return to the previous setting.
 - ⊠ Click 'Clear Area' to delete the selected Area.

Setup - Camera Setup


Profile Configuration

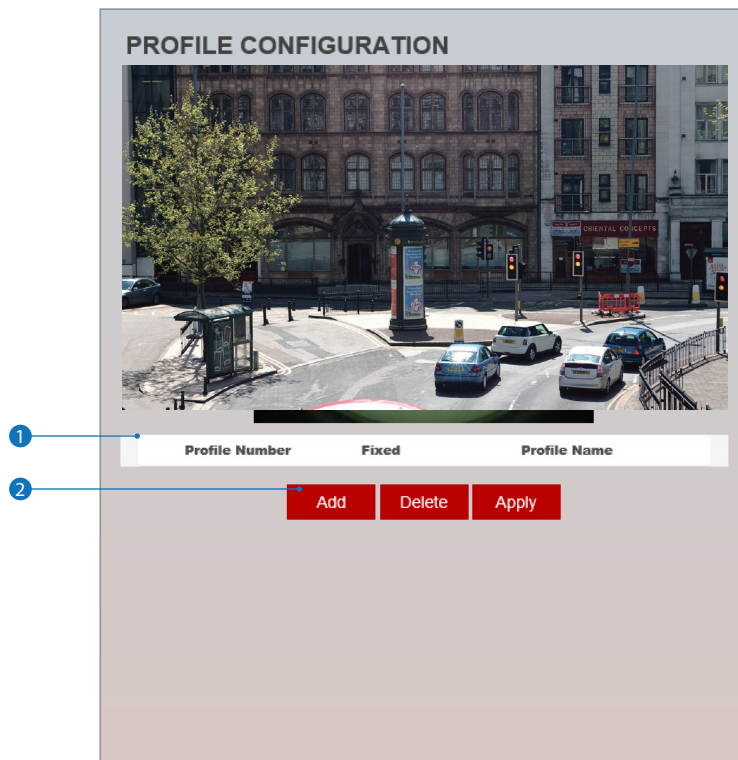

- 1 **Profile List** - Displays information about available camera settings profiles.
- 2 Click 'Add' to add a new profile using the current camera settings.
 - ⊠ Click 'Delete' to delete selected item from the profile list.
 - ⊠ Click 'Apply' to apply settings from the selected profile.

Setup - Camera Setup


Camera Image Adjustment

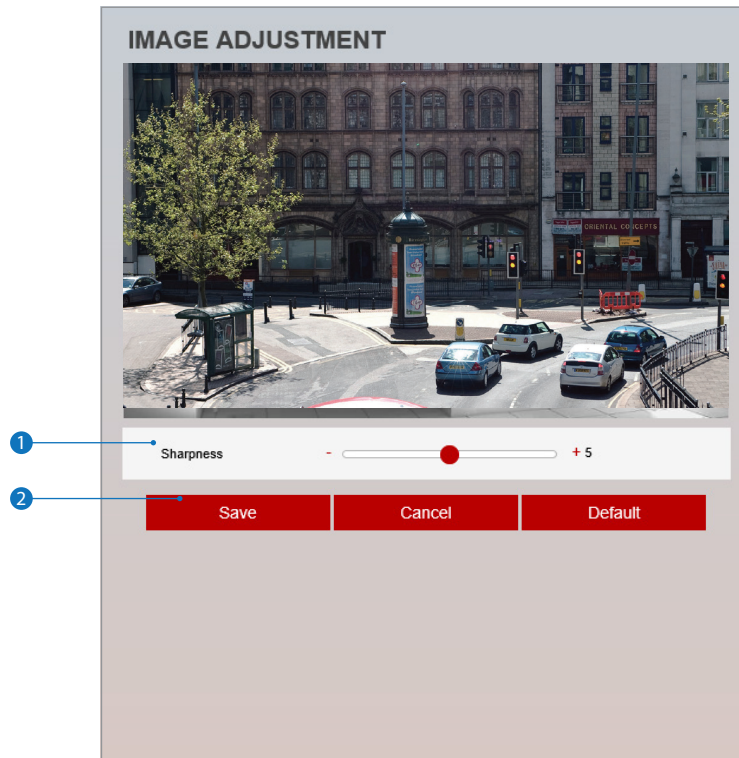

- 1 **Sharpness** - Using this control, sharpness of image can be adjusted to meet your preference.
- 2 Click **Save** to save the current settings.
 - ⊠ Click 'Cancel' to return to the previous settings.
 - ⊠ Click 'Default' to return settings to the factory defaults.

Setup - Camera Setup


Camera Exposure Settings

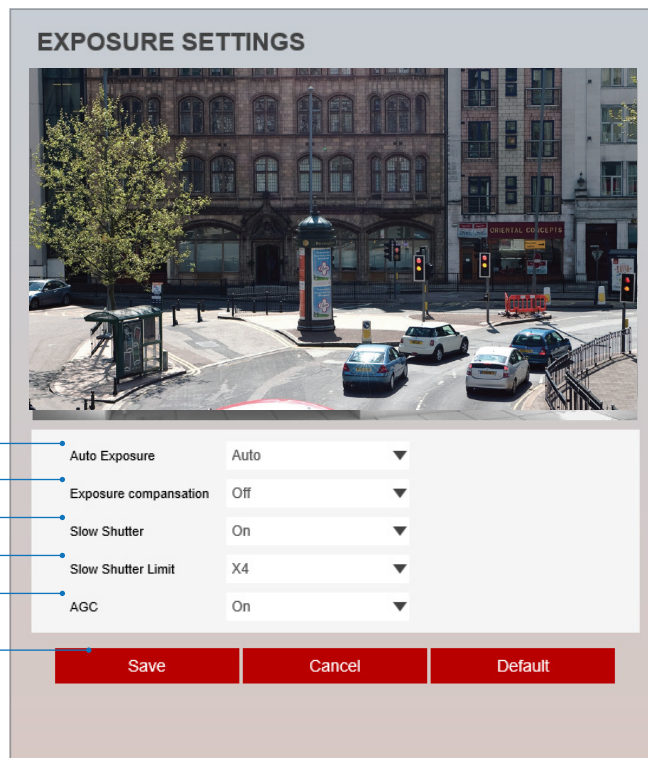

- 1 **Auto Exposure (Auto)** - Automatic exposure(AE) automatically sets the aperture or shutter speed, based on the external lighting conditions for the photo. Auto / Manual / Shutter Priority / Iris Priority / Bright Mode. Available shutter speeds may vary depending on the camera model.
 - **[Manual]**
 - Shutter Speed : 1/8, 1/15, 1/30, 1/60, 1/120, 1/125, 1/700, 1/1000, 1/1600, 1/2500, 1/5000, 1/7000, 1/10000, 1/30000
 - Iris : 0 (Close) ~ 20 (Open)
 - Gain : 0 step ~ 10 step
 - **[Shutter]**
 - Shutter Speed : 1/8, 1/15, 1/30, 1/60, 1/120, 1/125, 1/700, 1/1000, 1/1600, 1/2500, 1/5000, 1/7000, 1/10000, 1/30000
 - **[Iris]**
 - Iris : 0 (Close) ~ 20 (Open)
 - **[Bright]**
 - Bright : Adjust the brightness. 0 (dark) ~ 20 (bright)
- 2 **Exposure Compensation** - Using this function helps to improve image quality by compensating for exposure. Select On / Off.
- 3 **Slow Shutter** - Slow shutter can be set to On / Off.
- 4 **Slow Shutter Limit** - Set the slow shutter limit. x2 / x4 are available.
- 5 **AGC** - Enable this function to enable Automatic Gain Control.
- 6 Click **Save** to save the current settings.
 - ⊠ Click 'Cancel' to return to the previous settings.
 - ⊠ Click 'Default' to return settings to the factory defaults.

Setup - Camera Setup

Camera Day & Night Settings

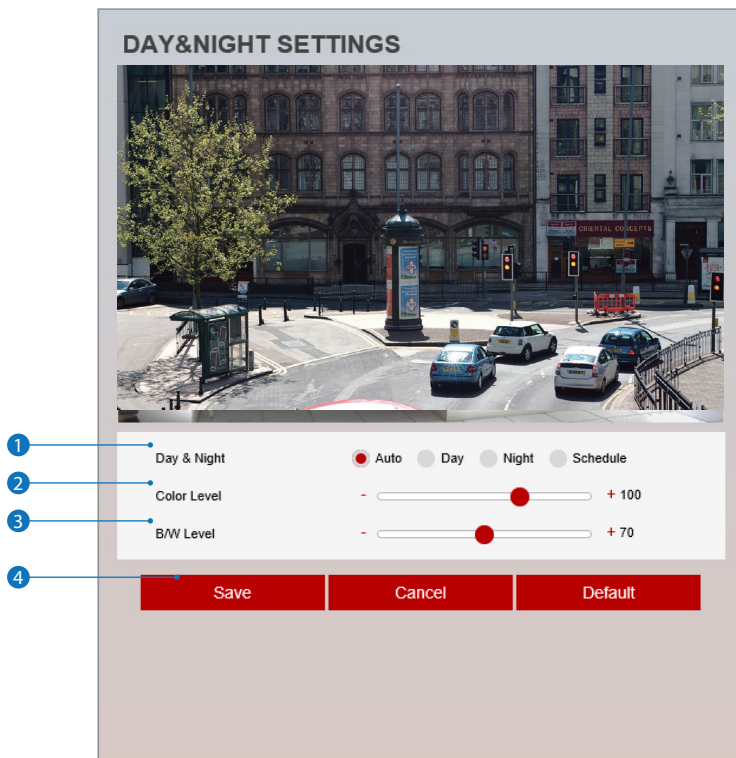

1 Day & Night

- **Auto:** In this mode, the IR cut filter is applied automatically depending on the light conditions of the environment.
- **Day:** In this mode, the IR cut filter is applied to the image sensor at all times. Thus, the sensitivity will be reduced in dark light conditions but better color reproduction performance is obtained.
- **Night:** In this mode, the IR cut filter on the image sensor is always disabled. The sensitivity will be enhanced in dark light conditions but the image is black and white.
- **Schedule:** In this mode, Day / Night mode is converted in accordance with the scheduled time.

⚙️ Schedule

- Day > Night Time / Night > Day Time : If it is set to schedule mode, Set the time that Day / Night mode switches.

Day & Night	<input type="radio"/> Auto	<input type="radio"/> Day	<input type="radio"/> Night	<input checked="" type="radio"/> Schedule
Day -> Night Time	19	00		
Night -> Day Time	5	00		

- 2 **Color Level** - Set the color level threshold for switching Night mode into Day mode when Day & Night mode is set to Auto.


- 3 **B / W Level** - Set the Black and White Level threshold for switching change Day mode into Night mode when Day & Night mode is set to Auto.

- 4 Click **Save** to save the current settings.

- ⚙️ Click 'Cancel' to return to the previous settings.
- ⚙️ Click 'Default' to return settings to the factory defaults.

Setup - Camera Setup

Camera Backlight Settings

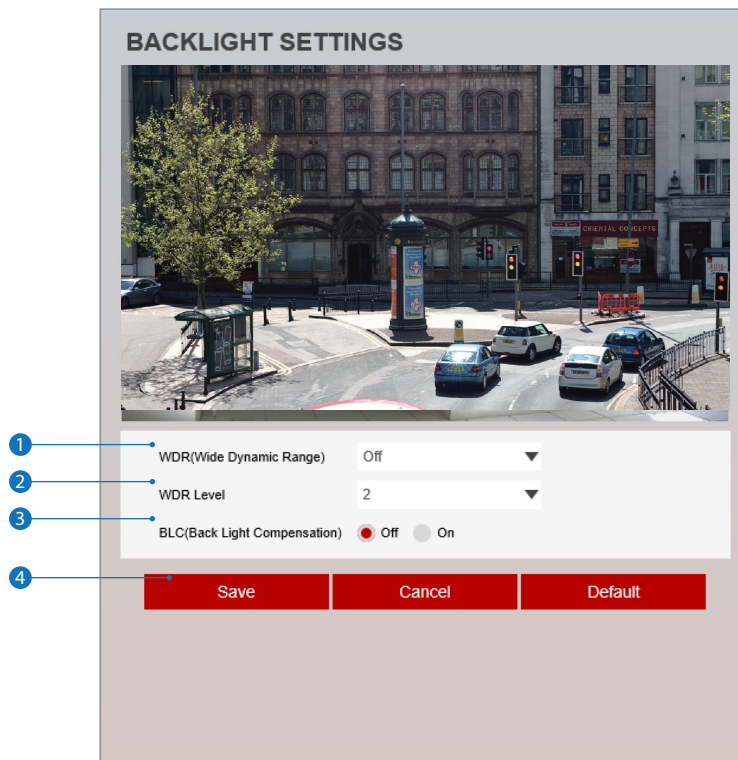


This is a feature used for problematic light conditions where the contrast from light to dark areas is very high.


- 1 **WDR (Wide Dynamic Range)** - The WDR function can be enabled or disabled.
- 2 **WDR Level** - Set the WDR level.
- 3 **BLC (Back Light Compensation)** - The BLC function can only be set when WDR is off.
- 4 Click Save to save the current settings.
 - ⌘ Click 'Cancel' to return to the previous settings.
 - ⌘ Click 'Default' to return settings to the factory defaults.

Setup - Camera Setup

Camera White Balance

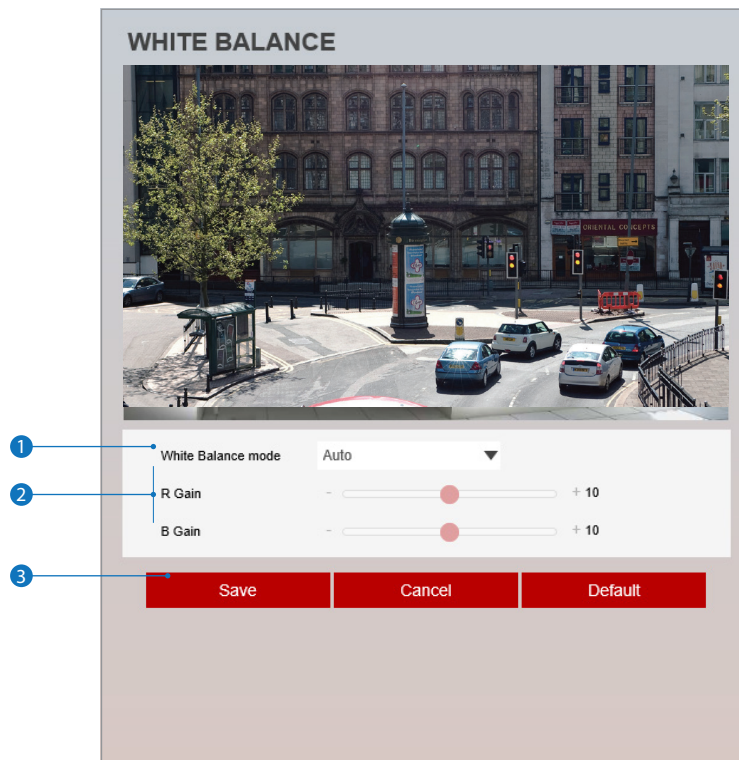


- 1 **Activation** - White Balance can be enabled or disabled here. Auto / Indoor / Outdoor / One Push WB / Manual modes available.
 - ⊗ **One Push WB** : Clicking the PUSH button saves the white balance value at the current state.

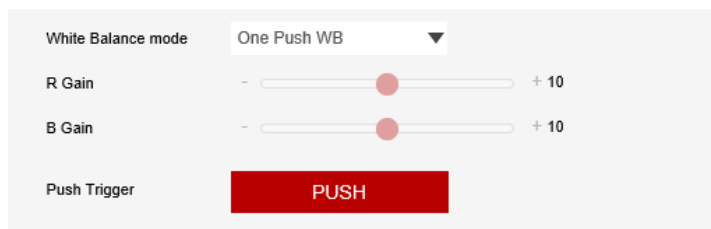

- 2 **White Balance Mode** - Select White Balance depending on the lighting conditions.
- 3 **RB Gain** - The R/B gain can be set only when the White Balance Mode is set to Manual.
- 4 Click **Save** to save the current settings.
 - ⊗ Click 'Cancel' to return to the previous settings.
 - ⊗ Click 'Default' to return settings to the factory defaults.

Setup - Camera Setup


Camera Image Enhancement

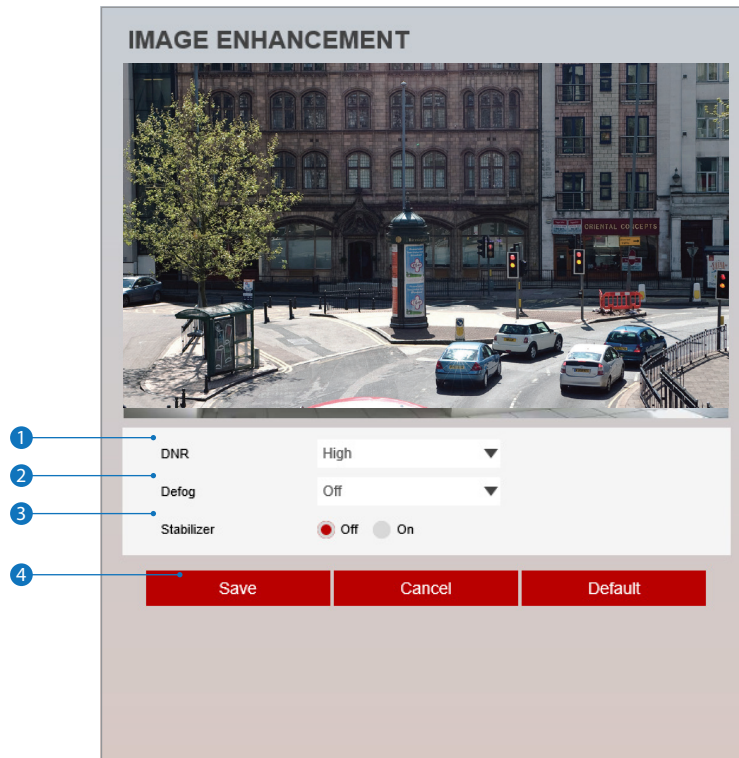

- 1 **DNR** - DNR function can be enabled to suppress noise and retain good video quality in low light conditions. Off / Middle / Low / High / Auto modes are available.
- 2 **Defog** - Fog compensation can be set. Off / Middle / Low / High
- 3 **Stabilizer** - The Stabilizer function can be enabled or disabled.
- 4 Click **Save** to save the current settings.
 - ⊠ Click 'Cancel' to return to the previous settings.
 - ⊠ Click 'Default' to return settings to the factory defaults.

Setup - Camera Setup

Video Enhancement

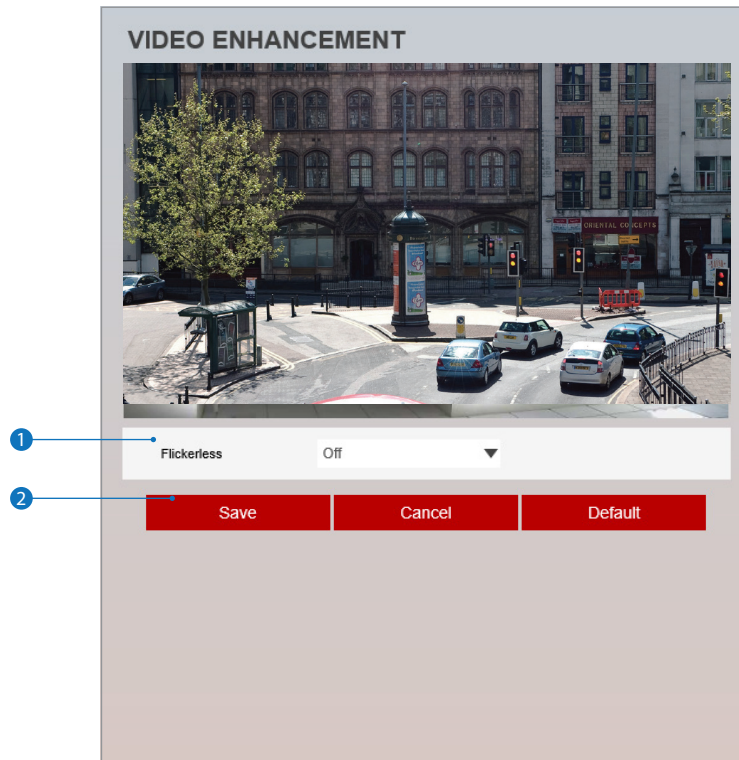

- 1 **Flickerless** - Enable to enhance images experiencing flickering.
- 2 Click **Save** to save the current settings.
 - ⊠ Click 'Cancel' to return to the previous settings.
 - ⊠ Click 'Default' to return settings to the factory defaults.

Setup - Network Setup

Network Status

NETWORK STATUS	
MAC Address	00:0D:F1:21:18:CC
IP Address	192.168.1.48
Subnet Mask	255.255.0.0
Default Gateway	192.168.1.1
Preferred DNS Server	192.168.1.1
Alternate DNS Server	
HTTP Port	80
HTTPS Port	443
RTSP Port	554

This menu will show Network information for the camera. Settings are for reference only and cannot be configured from this screen. 3xLOGIC recommends editing camera IP and network info from the 3xLOGIC Camera Setup Utility-B or from Network Settings (detailed in the next page of this guide).

Setup - Network Setup

Network Settings

NETWORK SETTINGS

Host name IPNC

1 Network Type
 Static Dynamic

2 IP setup

3 IP Address 192.168.1.48

4 Subnet Mask 255.255.0.0

5 Default Gateway 192.168.1.1

6 Preferred DNS Server 192.168.1.1

Alternate DNS Server

7 Port Setup

8 HTTP Port 80 [Default: 80, 1025 ~ 60000]

9 HTTPS Port 443 [Default: 443, 1025 ~ 60000]

RTSP Port 554 [Default: 554, 1025 ~ 60000]

10 Apply

- 1 Network Type** - Define network IP address type from the Static Mode for the fixed IP or the Dynamic Mode by the dynamic IP address. Dynamic is the default mode used on 3xLOGIC VISIX Cameras.
If you select Static Mode, you must fill out IP Address, Subnet Mask, Gateway, DNS Server and all ports.
If you select the Dynamic Mode, the IP address will be allocated automatically by DHCP equipment.
If you click the Apply button to update changes, the system will be re-booted.
In this case, you have to reconnect to the camera using the new IP address.
- 2 IP Address** - Define the IP address. The address consists of four numbers separated by dots and the range of each number is from 0 to 255.
- 3 Subnet Mask** - Define the Subnet Mask. Format is same as the IP address.
- 4 Default Gateway** - Default the Gateway IP Address. Format is same as the IP address.
- 5 Preferred DNS Server** - Define the DNS server IP address. Format is same as the IP address.
- 6 Alternate DNS Server** - Define the Secondary DNS server IP address. Format is same as the IP address.
- 7 HTTP Port** - The HTTP port can be set to 80 which is default or in the 1025 to 60000 range.
- 8 HTTPS Port** - The HTTPS port can be set to 443 which is default or in the 1025 to 60000 range.
- 9 RTSP Port** - The RTSP port can be set to 554 which is default or in the 1025 to 60000 range.
- 10 Click Apply** to save new settings. If you click the Apply button to update changes, the system will be re-booted.
If you have changed the IP address, you will have to reconnect to the camera using the new IP and re-login. If the camera is added to VIGIL Server, VIGIL Server will have to be updated with the new camera network and IP settings.

Setup - Network Setup

WiFi Settings

The screenshot shows the 'WI-FI SETTINGS' page. It features a table of available networks, a section for WPS (Wi-Fi Protected Setup), a status section, and a network selection section. Blue callouts with numbers 1, 2, and 3 point to the network selection table, the WPS section, and the network selection options, respectively.

Index	SSID	Q(70)	WPA
0	FKA	58	WPA2
1	TELUS0008	30	WPA2
2	TELUSB44E	37	WPA2
3	TELUS0007	28	WPA2
4	WebDev-Network	47	WPA2
5	AVghar	36	WPA2
6	TELUSB563	34	WPA2
7	TELUSB563-GUEST	27	WPA2
8	TELUS01DA	27	WPA2

Select SSID: WebDev-Network

Password: [masked] **Apply**

WPS(Wi-Fi Protected Setup)

PBC [Generate] **PinCode**

Wi-Fi Status

Connection Status: connected not connected

Connected SSID: WebDev-Network

IP Address: 192.168.100.106 **Refresh**

Select Network

Select Network: Auto Wire Wireless **Apply**

This page will only be visible for Wifi-capable camera models (VX-2M-CPIR-IAW, etc...). A camera's WiFi settings can be configured from this page after identifying and locating the camera on your network. For detailed instructions on WiFi setup, see your devices Quick Start guide.

- 1 Network Select** - Available networks are listed with SSID and network security type available. Select a network, enter in credentials and click **Apply** to connect.
- 2 WPS (Wi-Fi Protected Setup)** - WPS PIN Generation can be performed here.
- 3 WiFi Status** - *Connection Status*, *Connected SSID* and *Current IP Address* for the listed network are given here.
- 4 Select Network** - If desired, the user can set the network mode under the Select Network section.
 - Set to **Wired** to use the ethernet / LAN connection only.
 - Set **Wireless** to use the configured WiFi / WAN network only.
 - Set **Auto** to allow the camera to choose its current network type based on the best available connection. This mode should only be used for standalone applications. If interfaced with a VIGIL Server, do not use Auto mode. The IP address for the device will change as network types are switched, causing signal loss with the camera in VIGIL Server. Select either Wireless or Wired when interfaced with a VIGIL Server.

Setup - Network Setup


Auto IP Settings

AUTO IP SETTINGS	
General Setting	
<input type="radio"/> Off <input checked="" type="radio"/> On	
UNIQUE ID	2634b5a7-58a4-4978-b707-3d1eb77b954b
AUTO IP ADDRESS	169.254.248.9
<input type="button" value="Apply"/>	

- 1 **General Setting** - The Auto IP Setting function can be enabled or disabled here.
- 2 **Auto IP Settings Information** - Displays the unique id or Auto IP address.
- 3 Click **Apply** to save new settings.

Setup - Network Setup

ONVIF Settings

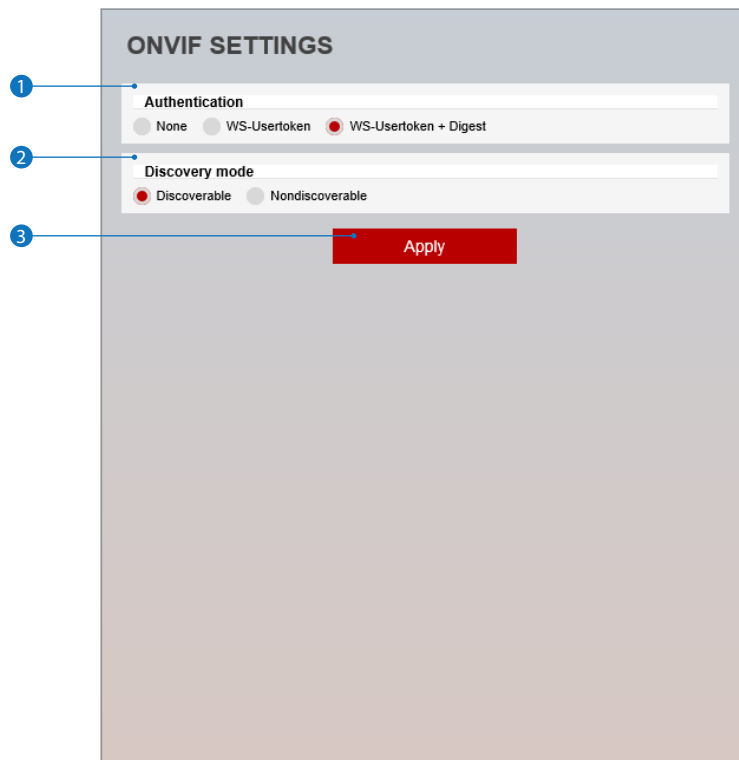

1 Authentication

None: Allows access without ONVIF authentication.

WS - Usertoken: Allows access with WS-User Token of ONVIF authentication.

WS - Usertoken + Digest: Allows access with WS-User Token and Digest of ONVIF authentication.

2 **Discovery Mode** - The ONVIF discovery function can be enabled or disabled.

3 Click **Apply** to save new settings.

Setup - Network Setup

UPNP Settings

UPNP SETTINGS

General Setting
 Off On

Device Information
FriendlyName: NDE0-SLAH9

Apply

- 1 **General Setting** - UPNP function can be enabled or disabled here.
- 2 **Friendly Name** - Define the an easily identifiable name for the device. Supports a maximum of 30 characters and special characters.
 - (/~!\$^(){}[];,) cannot be used.
 - ('@', '.', '_', '-', ',') can be used.
- 3 Click **Apply** to save new settings.

Setup - Network Setup

DDNS Settings

1 **DDNS Disable** - When selected, the DDNS service is disabled

2 **Public DDNS** - To use a public DDNS service, select an approved site address listed in the list. After filling out the *Host Name* of the site, setup is completed by entering *User Name* and *Password* registered in that DDNS site.

DDNS Provider	Site Address
DynDNS	www.dyndns.com
No-IP	www.no-ip.com

⚠ If you setup DDNS properly, the IP address of your camera will be updated automatically whenever the IP address is changed or the system is rebooted.

⚠ If IP updating to DDNS site is failed, the camera will keep retrying in 1min. intervals.

3 Click **Apply** to save new settings.

Setup - Network Setup

FTP Settings

The screenshot shows the 'FTP SETTINGS' configuration page. It is divided into two main sections: 'General Setting' and 'Server information'. The 'General Setting' section has a radio button for 'Off' (selected) and a radio button for 'On'. The 'Server information' section contains several input fields: 'FTP Server Address', 'FTP Upload Path' (with a '/' character), 'FTP Port' (with '21'), 'User ID', and 'Password'. A red 'Apply' button is located at the bottom of the form. Seven numbered blue callouts point to the following elements: 1. General Setting section, 2. FTP Server Address field, 3. FTP Upload Path field, 4. FTP Port field, 5. User ID field, 6. Password field, and 7. Apply button.

To transfer / save images to a relevant site via FTP, then FTP must be enabled and configured here.

- 1 **General Setting** - FTP function can be enabled or disabled here.
- 2 **FTP Server Address** - Define FTP Server IP Address. If IP Address form is incorrect, a Message box will deploy warning the user.
- 3 **FTP Upload Path** - Define a path on the FTP server to store images. For the path name, English Alphabets, numbers and special characters (/ ~ ! @ \$ ^ () _ - { } [] ; ,) can be used.
- 4 **FTP Port** - Define the FTP Server Port. If no port is available, it is impossible to access the FTP Server from the camera.
- 5 **User ID** - Enter a User ID to access the FTP Server. Fill out using the correct User ID registered in the FTP Server.
- 6 **Password** - Enter a Password to access to the FTP Server. Fill out using the correct Password registered in the FTP Server.
- 7 Click **Apply** to save new settings.
☒ Refer the above screen image for the example.

Setup - Network Setup

SMTP Settings

The screenshot shows the 'SMTP SETTINGS' configuration page. It is divided into three main sections: 'General Setting', 'Account information', and 'Mail Contents'. The 'General Setting' section has a toggle for 'Off' (selected) and 'On'. The 'Account information' section includes fields for 'Mode' (PLAIN selected, SSL/TLS), 'SMTP Server Address', 'PORT' (25), 'User ID', 'Password', 'E-Mail Sender', and 'E-mail Receiver'. The 'Mail Contents' section has fields for 'Title' and 'Message'. At the bottom, there is a red 'Apply' button. Numbered callouts 1 through 11 point to these specific elements.

To send / save the image via Email, SMTP needs to be setup.

- 1 General Setting** - SMTP function can be enabled or disabled here.
- 2 Mode** - Select Security mode of SMTP from Plain or SSL / TLS. After checking account setup of your SMTP Server, select the correct option.
- 3 SMTP Server Address** - Define the SMTP Server Address. If the IP Address form is incorrect, the user will be prompted with a warning.
- 4 Port** - Define the Port used in the Plain or SSL / TLS security mode.
- 5 User ID** - Enter the User ID to access the SMTP Server. Fill out using the correct User ID registered with your email provider.
- 6 Password** - Enter the Password to access the SMTP Server. Fill out using the correct Password registered with your email provider.
- 7 E-Mail Sender** - Define the e-mail address of the E-Mail Sender. It will be displayed as the sender when the camera sends an E-mail.
- 8 E-Mail Receiver** - Define the e-mail address of E-Mail Receiver. It will be displayed as the Receiver when the camera sends an E-mail.
- 9 Title** - Define the title of the E-Mail when the camera sends an E-mail.
⚠ The title of the Email is limited to 40 characters including the spaces.
- 10 Message** - Define the contents of E-Mail when camera sends an E-mail. The message of the Email is limited to 40 characters including the spaces.
- 11** Click **Apply** to save new settings.

Setup - Network Setup

SNMP Settings

The screenshot shows the 'SNMP SETTINGS' configuration page. It is divided into two main sections: 'SNMP v1/v2c' and 'SNMP v3'.
1. Under 'SNMP v1/v2c', there are radio buttons for 'SNMPv1' and 'SNMPv2c', both currently set to 'Off'. Below these are text input fields for 'Read community' (containing 'public') and 'Write community' (containing 'private').
2. Below the community fields, there is a radio button for 'SnmTrap' (set to 'Off'), a text input for 'TrapAddress' (containing '0.0.0.0'), and a text input for 'TrapCommunity' (containing 'public').
3. The 'SNMP v3' section starts with a 'Mode' dropdown menu set to 'Read'.
4. Below the mode, there is an 'Activation' radio button set to 'Off'.
5. A 'Read name' text input field contains 'root'.
6. A 'Security Level' dropdown menu is set to 'no auth, no priv'.
7. An 'Authentication Algorithm' dropdown menu is set to 'MD5'.
8. An 'Authentication Password' text input field is empty.
9. A 'Private-Key Algorithm' dropdown menu is set to 'DES'.
10. A 'Private-Key Password' text input field is empty.
11. At the bottom right of the form is a red 'Apply' button.

SNMP is for advanced users only.

1 **SNMPv1/SNMPv2** - Select the SNMPv1/SNMPv2 option and type the names of Read community and Write community.

SNMP trap can be used to check periodically for operational thresholds or failures that are defined in the MIB.

2 **SNMP Trap** - SNMP trap can be enabled or disabled.

SNMPv3 contains cryptographic security, a higher security level, which allows you to set the Authentication password and the Encryption password.

3 **Mode** - Select either Read or Read/Write mode.

4 **Activation** - Disable or activate the selected mode.

5 **Read/Write name** - Define Read name and Write name.

6 **Security Level** - Select one of no auth, no priv/auth , no priv/auth, priv

7 **Authentication Algorithm** - Select MD5 or SHA as the authentication method.

8 **Authentication Password** - The Authentication Password is an encrypted password used for authentication. A minimum of 8 digits required and a maximum of up to 30 digits allowed.

9 **Private-Key Algorithm** - Select DES or AES as the encryption algorithm.

10 **Private-Key Password** - Information protection password is a private encrypted password. A minimum of 8 digits required and a maximum of up to 30 digits allowed.

11 Click **Apply** to save new settings.

Setup - Network Setup

RTSP Information

The screenshot shows the 'RTSP INFORMATION' configuration page. It is divided into several sections: 'RTSP Global Setting', 'Session Timeout', 'QoS Setting', and 'Rtp Multicast'. Below these is an 'Apply' button and a table showing RTSP connection information.

RTSP INFORMATION

RTSP Global Setting

Target Stream: Main Stream

Session Timeout

Time Out: 0 [Default: Off, 30~120]

QoS Setting

DSCP: 0 [0~255]

Rtp Multicast

MULTICAST: Stop Start

IP: 0.0.0.0

PORT: 0 [1024~60000]

TTL: 0 [1~255]


Apply

No	Remote IP	Port	Type
1	192.168.4.100	60183	TCP

- 1 Target Stream** - Select the stream you want to configure
- 2 Time out** - Set the RTSP time out.
 - ⚠ The session is disconnected after the specified time out.
- 3 QoS Setting** - Set the quality of service to ensure data transfer performance.
- 4 RTP Multicast** - Check RTP Multicast Start/Stop. To activate RTP Multicast.
 1. Click "On" button.
 2. Enter accessible RTP Multicast IP, port for video stream control, RTP packet TTL.
 3. Click "Apply" button.
 - ⚠ It is possible to set each RTP Multicast for Stream 1-3 (main, sub, third).
- 5 Click Apply** to save new settings.
 - ⚠ Click this button between configuring the different channels or data will not be saved for the preceding channel settings.
- 6 RTSP Connection information.**

Setup - Trigger Action Setup

Action Rules Configuration

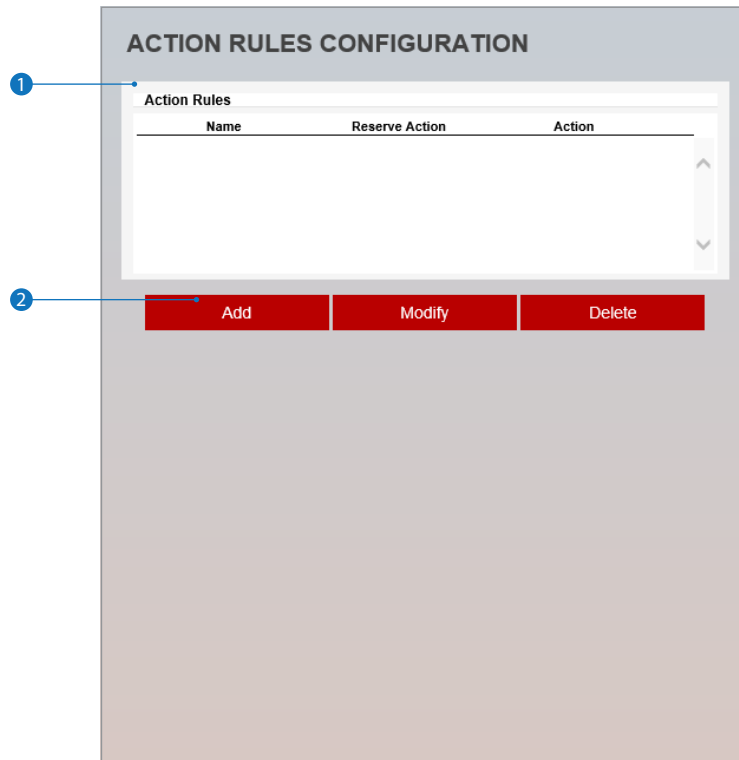

- 1 **Action rules List** - This indicates the custom action rule information added to the Action rules list.
- 2 Click **Add** to add custom action rules.
 - ✘ Click 'Modify' to modify a selected item from the action rules list.
 - ✘ Click 'Delete' to delete a selected item from the action rules list.

Setup - Trigger Action Setup

Action Rules Add / Modify

ACTION RULES CONFIGURATION

General Setting

1 Name NewAction

2 Operation Interval 0 Second(s) [0 ~ 60]

3 Action1 NONE

Action2 NONE

Action3 NONE

Action4 NONE

Action5 NONE

4 Save Cancel

- 1 **Name** - Name the action rule.
 - ⊠ Input text must be between 315 characters.
- 2 **Operation Interval** - Select the interval to maintain event mode.
- 3 **Action1 ~ Action5** - Select the action to take if the event occurs. Recording, FTP Recipient, SMTP Recipient and Relay Out are available.
- 4 Click **Save** to save the current settings.
 - ⊠ Click 'Cancel' to return to the previous menu.

Setup - Trigger Action Setup

Image Transfer Configuration

IMAGE TRANSFER CONFIGURATION

1. Add the FTP/SMTP action in the event rules menu.
2. When an event occurs, the images will be sent to ftp/smtp address .
3. Determine the image transfer speed and the duration of image transfer after/before an event.

Pre/Post Alarm Image

Number Of Image	2	Image Per Seconds(s) [1 ~ 5]
Pre-Alarm Duration	3	Second(s) [1 ~ 5]
Post-Alarm Duration	3	Second(s) [1 ~ 30]

Apply

Image Transfer on Event can only be configured when FTP or SMTP is selected as an event rule action.

1 Pre / Post Alarm Image - Image Transfer due to event is configured by setting the Image transfer rate and Pre / Post alarm duration.

	Descriptions
Number of Image	Define Number of image transferred per second.
Pre-alarm Duration	Define duration of image transfer before an event.
Post-alarm Duration	Define duration of image transfer after an event.

2 Click **Apply** to save new settings.

Setup - Trigger Action Setup

Relay Out Configuration


The screenshot shows a configuration window titled "RELAYOUT CONFIGURATION". It contains the following fields and controls:

- 1** Relay output: A dropdown menu showing "01".
- 2** Mode: Two radio buttons, "Monostable" (unselected) and "Bistable" (selected).
- 3** Idle state: Two radio buttons, "Closed" (unselected) and "Open" (selected).
- 4** Duration: A text input field containing "0" and a label "Second(s) [0 ~ 30]".
- 5** Apply: A red button with the text "Apply".

- 1 Relay Output** - Select the Relay output to trigger.
 - ⚠ The number of relay outputs depends on the camera model.
- 2 Mode** - Select monostable / bistable for relay mode.
- 3 Idle State** - Select whether the contact is normally opened or is closed.
- 4 Duration** - The relay will remain trigger during the set time.
 - ⚠ If bistable mode is selected, this function is activated
- 5** Click **Apply** to save the new settings.

Setup - Event Setup

Event Rules Configuration

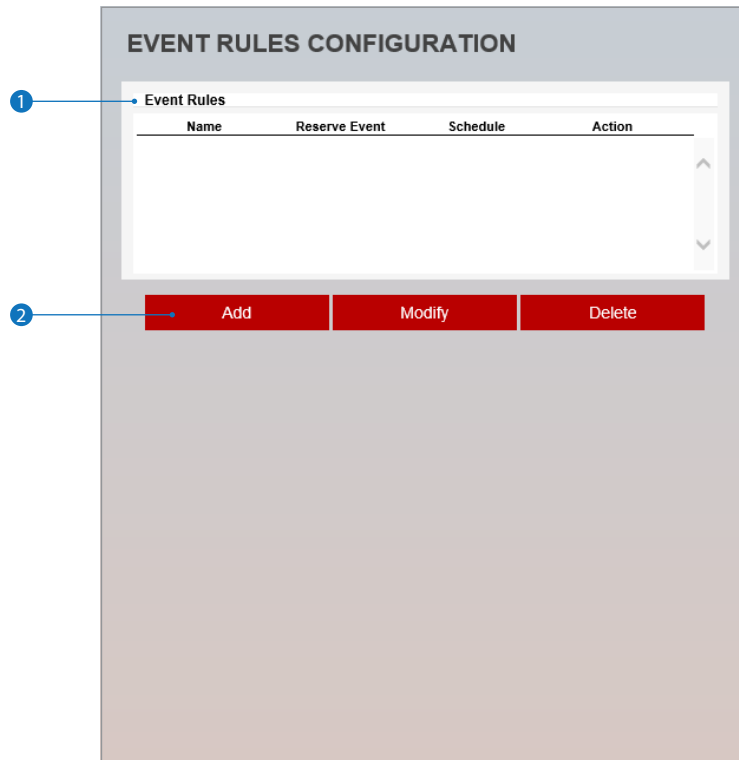

- 1 **Event Rules List** - Event Rule information for added event rules is displayed here.
- 2 Click 'Add' to add custom event rules.
 - ⊠ Click 'Modify' to modify a selected item from the event rules list.
 - ⊠ Click 'Delete' to delete a selected item from the event rules list.

Setup - Event Setup

Event Rules Configuration

The screenshot shows the 'EVENT RULES CONFIGURATION' interface. It is divided into three main sections: 'General', 'Event Condition', and 'Action'.
1. 'General' section: Includes an 'Activation' toggle (currently 'On') and a 'Name' field containing 'NewRule'.
2. 'Event Condition' section: Includes an 'Event' dropdown menu (set to 'NONE'), a 'Schedule' toggle (currently 'Always'), a 'Week' section with checkboxes for days of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat), and a 'Time' section with two time pickers (00:00 ~ 00:00).
3. 'Action' section: Includes a 'Rules' dropdown menu (set to 'NONE').
At the bottom, there are two red buttons: 'Save' and 'Cancel'.
Numbered callouts (1-7) point to: 1. Activation toggle; 2. Name field; 3. Event dropdown; 4. Schedule toggle; 5. Week checkboxes; 6. Rules dropdown; 7. Save button.

- 1 Activation** - The Event Rules function can be enabled or disabled here.
- 2 Name** - Define the Event rule name.
- 3 Event** - Select the event type. Types include motion detection, network disconnection, illegal login detected, temperature critical, schedule, sensor detection.
 - Click 'Cancel' to return to the previous setting.
- 4 Schedule** - Set an activation time. The event can only occur during the stated time period. Always / Manual Time available. Manual mode will require the custom creation of a schedule.
- 5 Week / Time** - When manual is selected, you need to define a *Start time* and *End time* followed by selecting *Days*. The setup schedule is repeated every week.
- 6 Rules** - Select the action rule defined in the Trigger Action-Action rule menu.
- 7** Click Save to save the current settings.
 - Click 'Cancel' to return to the previous setting.

Setup - Event Setup

Schedule Configuration

SCHEDULE CONFIGURATION

Recurrences Function

Mode Enable Disable


Repeat rule Every 5 minutes

Apply


- 1 **Mode** - The Schedule function can be enabled or disabled here.
- 2 **Repeat Rule** - If desired, set a recurring time the event occurs.
- 3 Click **Apply** to save new settings.

Setup - Event Setup

Motion Detection Configuration

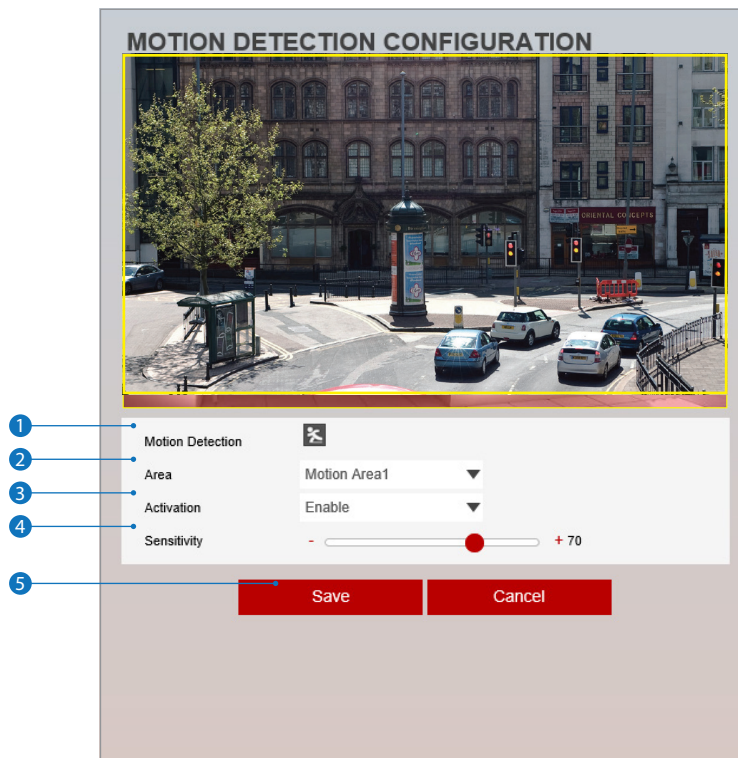

1 **Motion Detection** - Shows the Motion event status.

☒ Event Alert Icon() appears if 'Motion Detection' is activated.

2 **Area** - Set the motion detected area.

☒ You can set up to four areas.

3 **Activation** - Enable or Disable motion detection.

4 **Sensitivity** - Define the sensitivity of motion detection.

If a High value is selected, it will detect very small motions while conversely, it becomes insensitive to motion when a Low value is selected.

5 Click **Save** to save the current settings.

☒ Click 'Cancel' to return to the previous settings.

Setup - Event Setup

Temperature

The screenshot shows a web interface titled "TEMPERATURE" with a "General Setting" section. The settings are as follows:


Field	Value	Range
Mode	Fahrenheit	
Threshold	150	[122 ~ 212]
Temperature	122 °F	

Below the settings is a red "Apply" button. Four numbered callouts (1-4) point to the Mode dropdown, the Threshold input field, the Temperature display, and the Apply button, respectively.

- 1 **Mode** - Select either Fahrenheit and Celsius.
- 2 **Threshold** - Define the temperature at which the event trigger occurs
- 3 **Temperature** - Indicates the current temperature of the IP camera.
- 4 Click **Apply** to save new settings.

Setup - Event Setup

Alarm Configuration

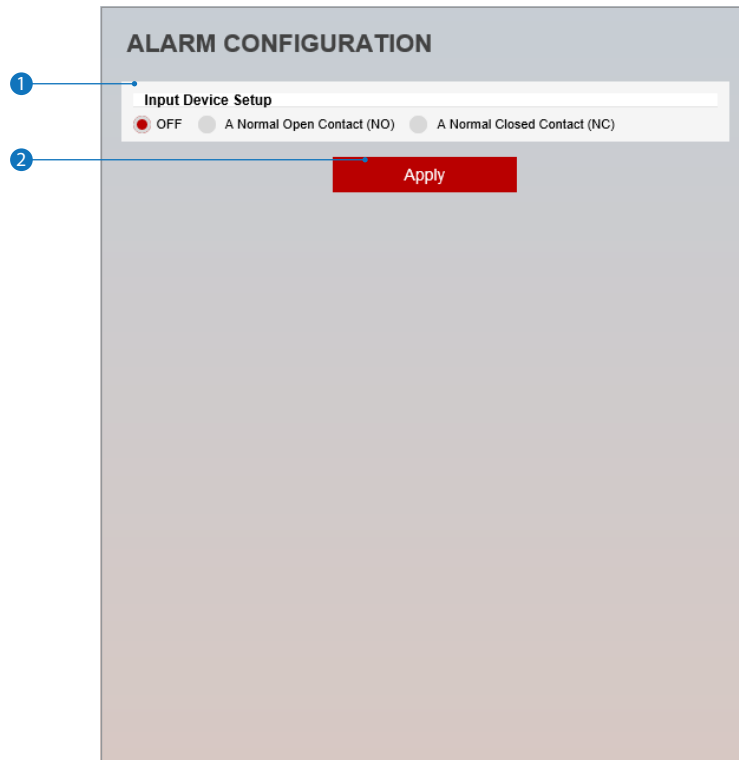


- 1 **Input Device Setup** - Select input device type from OFF / N.O. / N.C.

	Operation
OFF	Ignore this input sensor.
NO	The contact is normally open and closed when activated.
NC	The contact is normally closed and open when activated.


- 2 Click **Apply** to save new settings.

Setup - Event Setup

Temperature Alarm Configuration

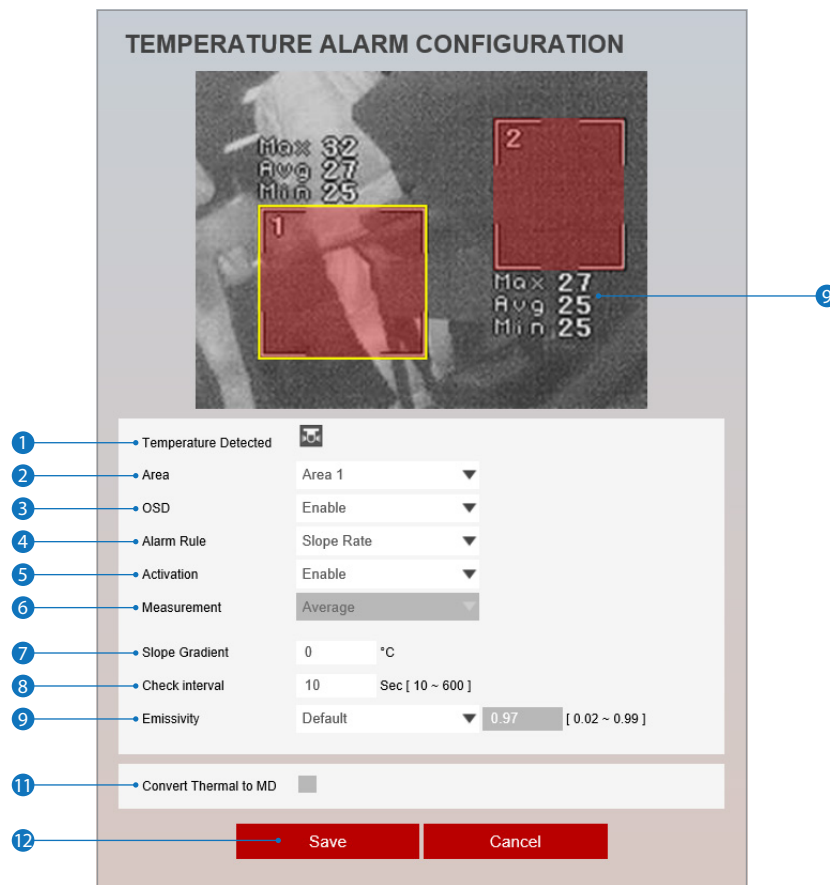


The Temperature Alarm configuration page will only be visible for applicable models (VX-VT-35/, VX-VT-56, etc...)

- 1 **Temperature Detected** - Indicates when a Temperature Alarm is generated.
 - Event Alert Icon () appears if 'Temperature Alarm' is activated.
- 2 **Area Selection** - There are 8 detection areas available. Area shape is rectangular, other shapes are not supported. In theory the minimum size of the area is single pixel but in practice this is hard to reach due to area drawing method
- 3 **OSD** - When enabled, the temperature values are overlaid over the video stream. Selection is for each area independently.
- 4 **Alarm Rule** - there are 3 alarm rules to select for the area:
 - a. **Above** : This setting will trigger Thermal Alarm Event when the detected temperature exceeds the value defined in 'Slope Rate'.
 - b. **Below** : This setting will trigger Thermal Alarm Event when the detected temperature is below the value defined in 'Slope Rate'.
 - c. **Slope Rate** : This setting will trigger alarm when the average area temperature changes the value defined in 'Measurement' quicker than the time defined in 'Check Interval'.
- 5 **Activation** - Enable or disable the selected area.
- 6 **Measurement** - This selection is not available for Alarm Rule 'Slope Rate'. For alarm rules Above or Below, the user has the following options :
 - a. **Maximum** : The alarm trigger is the highest detected pixel temperature.
 - b. **Average** : The alarm trigger is the average temperature on the area. Average calculation identifies the temperature of each pixel in the area and divides the sum by the count of pixels in the area.
 - c. **Minimum** : The alarm trigger is the lowest detected pixel temperature.

Setup - Event Setup

Temperature Alarm Configuration

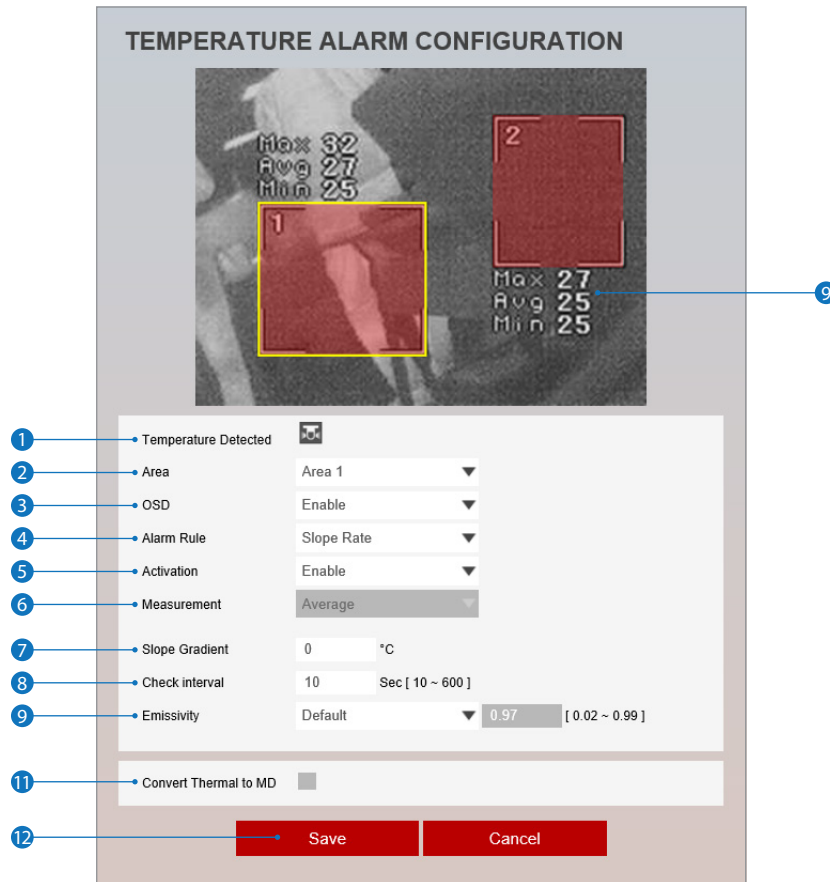


- 7 **Slope Gradient** - When Alarm Rule on 'OSD' is set to 'Slope Rate', this field becomes visible. In this field you define the temperature change that, when exceeded within the time set in 'Slope Gradient' will trigger Thermal Alarm Event. Temperature change considers both increasing and decreasing values.
- 8 **Check Interval** - When Alarm Rule on 'Alarm Rule' is set to 'Slope Rate', this field becomes visible. In this field you define the time interval at which the temperature change is measured. When the temperature changes the value of 'Measurement' quicker than this value, it will trigger Thermal alarm event.
- 9 **Alarm Temperature** - When Alarm Rule on 'OSD' is set to 'Above' or 'Below', this field becomes visible. In this field you define the temperature value which is the trigger point for the Alarm rule 'OSD'.
- 10 **Emissivity** - Different surfaces have different temperature emission values. You need to select proper material from the dropdown list to make the detection accurate. Available option are as on the image. Custom selection enables the user to set numeric value freely: Default / Glass, smooth(uncoated) / Limestone / Concrete, rough / Aluminum, anodized / Brick / Paint(including white) / Marble(polished) / Plaster, rough / Asphalt / Paper, roofing or white / Copper, oxidized / Copped, polished / Silver, oxidized / Aluminum foil / Silver, polished / Custom.
- 11 **Convert Thermal to MD** - This selection converts Thermal Alarm Event to Onvif Motion Detection event, allowing a customer having regular recorder to record alarm events and to search them based on motion detection.
- 12 Click 'Save' to save the current settings.
 ⌘ Click 'Cancel' to return to the previous setting.


Setup - Event Setup

Temperature Alarm Configuration

Detection Type - Above / Below

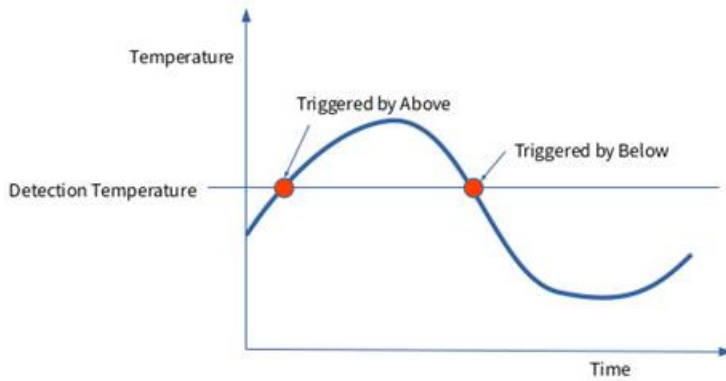

Detection Type - Slope Rate

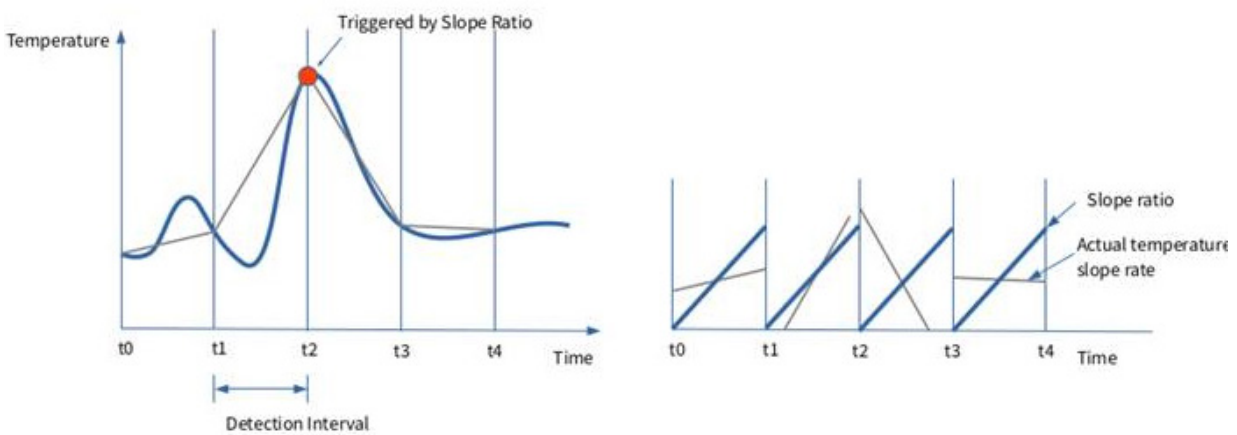

Material Emissivity

Material	Emissivity	Material	Emissivity
Water, pure	0.96	Plaster, rough	0.89
Glass, smooth(uncoated)	0.95	Asphalt	0.88
Limestone	0.92	Paper, roofing or white	0.88 to 0.86
Concrete, rough	0.91	Copper, oxidized	0.87
Aluminum, anodized	0.9	Copper, polished	0.04
Brick	0.9	Silver, oxidized	0.04
Paint(including white)	0.9	Aluminum foil	0.03
Marble(polished)	0.89 to 0.92	Silver, polished	0.02

Setup - Record Setup

Record Management

The screenshot shows the 'RECORD MANAGEMENT' interface. It features a 'Record Global Setting' section with a 'Target Stream' dropdown menu currently set to 'NONE'. Below this is a red 'Save' button. The 'RECORDING LIST' section contains a table with the following data:

Name	Enabled	File Type	Storage	Continuous
RECORD0	X	MP4	STORAGE1	Off
RECORD1	X	MP4	STORAGE1	Off

Below the table is a red 'Modify' button. Four numbered callouts (1-4) point to the 'Target Stream' dropdown, the 'Save' button, the 'RECORDING LIST' table, and the 'Modify' button, respectively.

- 1 **Target Stream** - Select the channel you want to record video from.
- 2 Click **Save** to save the current settings.
- 3 **Recording List** - Display the information about the recording settings.
- 4 Click 'Modify' to modify the selected item in the recording list.

Setup - Record Setup

Record Configuration

RECORD MANAGEMENT

Record Settings

1 Enabled Off On

2 Storage Device SDCard 1

3 File Type MP4

4 Storage SDCard

5 Continous Off On

6 Pre Duration 5 [0 ~ 5]


7 Post Duration 5 [1 ~ 240]

8 Save Cancel

- 1 **Enabled** - The Recording function can be enabled or disabled.
- 2 **Storage Device** - This item cannot be selected. Shows the saved SD Card.
- 3 **File Type** - Select the recording file type.
 - ⚠ Currently only supports MP4 Type.
- 4 **Storage** - Select the storage type. SD Card(Disabled) selection is not allowed.
- 5 **Continous** - If continous mode is turned on, start continuous recording without any other setting. This settings is indepedent of recording to a VIGIL Server.
- 6 **Pre Duration** - Define duration of pre-recording before an event.
- 7 **Post Duration** - Define duration of post-recording image transfer after an event.
- 8 Click **Save** to save the current settings.
 - ⚠ Click 'Cancel' to return to the previous setting.

Setup - Record Setup

Recording List

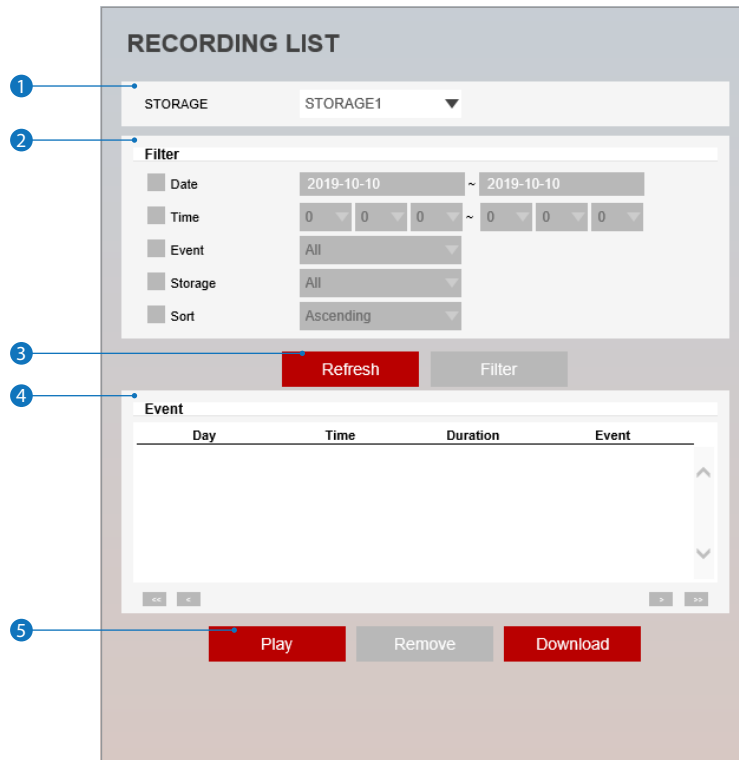


- 1 **Storage** - Select the Storage type from the list.
- 2 **Filter** - Select the date / time, event, sort or storage format to filter the recorded video.
- 3 Click the 'Refresh' button to refresh the records list.
 - ⊠ Click 'Filter' to view the filtered recorded video.
- 4 **Recording List** - Display the information for recording video.
- 5 Click 'Play' to view the selected item in list of recorded video.
 - ⊠ Click 'Remove' to delete the selected item in list of recorded video.
 - ⊠ Click 'Download' to download the selected item in list of recorded video.
 - When you click Download, the following window appears.
 - When downloading, please fill up the purpose within 30 characters. (The purpose you created is shown on the Log page with the download time)

Input the purpose of the file download (max : 32 characters)

⊠ When playing back recorded MP4 file format with H.265 (HEVC) codec, video may not play due to the performance issues with the VLC plug-in. 3xLOGIC recommends always recording and reviewing video via the VIGIL VMS.

Setup - Record Setup Recording Video

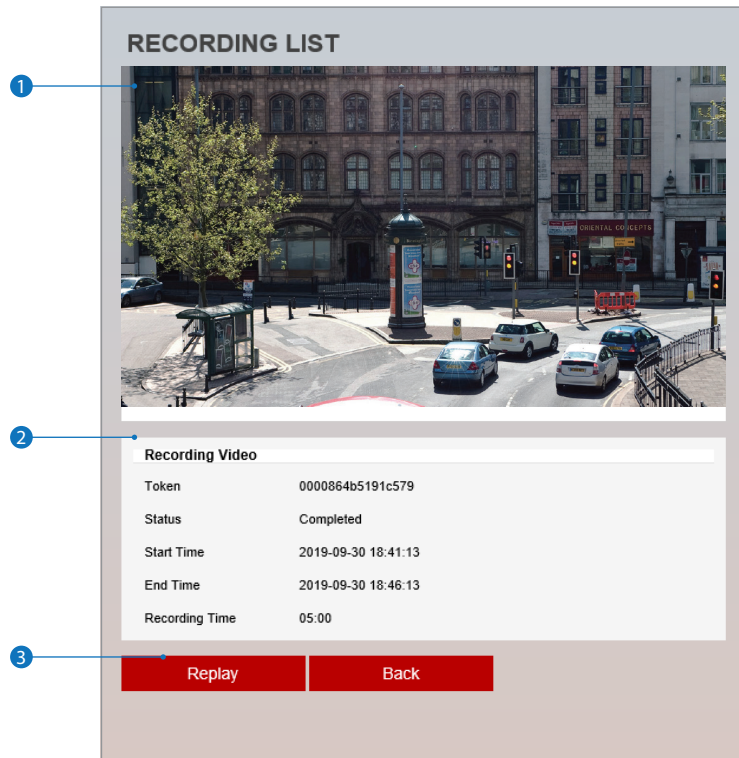

- 1 **Recording Video Viewer** - Play the recorded video.
- 2 **Recording Video Information** - Display the information about the recorded video.
- 3 Click 'Replay' to view the recorded video again.
 - ⌘ Click 'Back' to return to the previous menu.

Setup - Record Setup

Storage Configuration

STORAGE CONFIGURATION

Notice
1. If SD Card does not automatically mount, you must format for mounting SD card.

Storage List				
Name	Mounted	Size	Used(%)	Available
SDCard1	X	0	0%	0

Display the SD card information mounted from device.

🔗 When you select the item in the storage list, you can set the functions related to the SD card here.

Setup - Record Setup

Storage Configuration

STORAGE CONFIGURATION

Notice
1. If SD Card does not automatically mount, you must format for mounting SD card.

1 Storage Size 0 / 0

2 Auto Delete NONE

3 Overwrite Off On

4 Unmount **Unmount**


5 Format **Format**

6 **Apply** **Cancel**

- 1 Storage Size** - Total capacity of SD card and remaining space are displayed here.
- 2 Auto Delete** - Select the period for Auto delete. The image data stored before period will be deleted automatically.
 - ☒ Deletes all stored image older than selected time.
- 3 Overwrite** - When set to ON and remaining space of SD card reaches less than 8MB, new data will start to be overwritten overtop the oldest data. However, if it is set OFF and remaining space of SD card reach to less than 8MB, recording will cease. This does not affect recording to a VIGIL Server.
- 4 Unmount** - Select this option to unmount the SD card from the device before physically removing it. This can help to avoid damage to stored data.
- 5 Format** - Delete the all contents that are stored in SD card and format.
- 6** Click **Apply** to save new settings.
 - ☒ Click 'Cancel' to return to the previous settings.

Setup - VCA Setup

VCA Enable

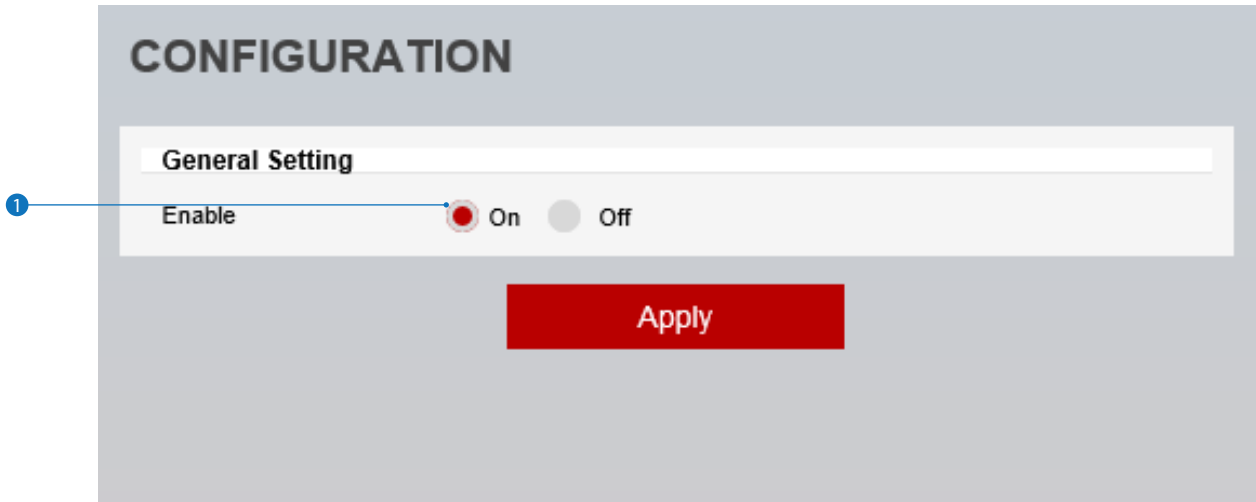

VCA rules can be used for detecting events of interest and triggering actions on-camera or within VIGIL Server to react to those events.

1 Enabled - Switch this option to *On* to enable VCA rules on the camera.

Once enabled, please visit www.3xlogic.com and see the *VISIX Gen III Cameras - VCA Analytics Guide* for more information on VCA licensing , configuring VCA rules, adding VCA rules from a camera to a VIGIL Server and more.

Setup - Security Setup

IP Address Filter Configuration

The screenshot shows the 'IP ADDRESS FILTER CONFIGURATION' interface. It is divided into several sections:

- General Setting:** Contains an 'IP Address Filter' toggle switch (currently set to 'Off') and an 'IP Filter Type' dropdown menu (currently set to 'Allow').
- Apply:** A red button to save the configuration.
- Filtered IP Address:** A table with a header 'IP Address' and an empty list area.
- IP Address:** An input field with a placeholder '[Invalid]'.
- Add/Remove:** Two red buttons at the bottom to manage the filter list.


Numbered callouts (1-6) point to the following elements:

- IP Address Filter toggle
- IP Filter Type dropdown
- Apply button
- Filtered IP Address table
- IP Address input field
- Add button

- 1 **IP Address Filter** - IP filter function can be enabled or disabled here.
- 2 **IP Filter Type** - Select the recording IP filter type.
- 3 Click **Apply** to save new settings.
- 4 **Filter IP Address** - Display the filtered IP addresses.
- 5 **IP Address** - Define the IP address you want to apply the IP filter to.
- 6 Click 'Add' to add the IP address to the filter list.
 - Click 'Remove' to remove the IP address selected in the list.

Setup - Security Setup

RTSP Authentication Configuration

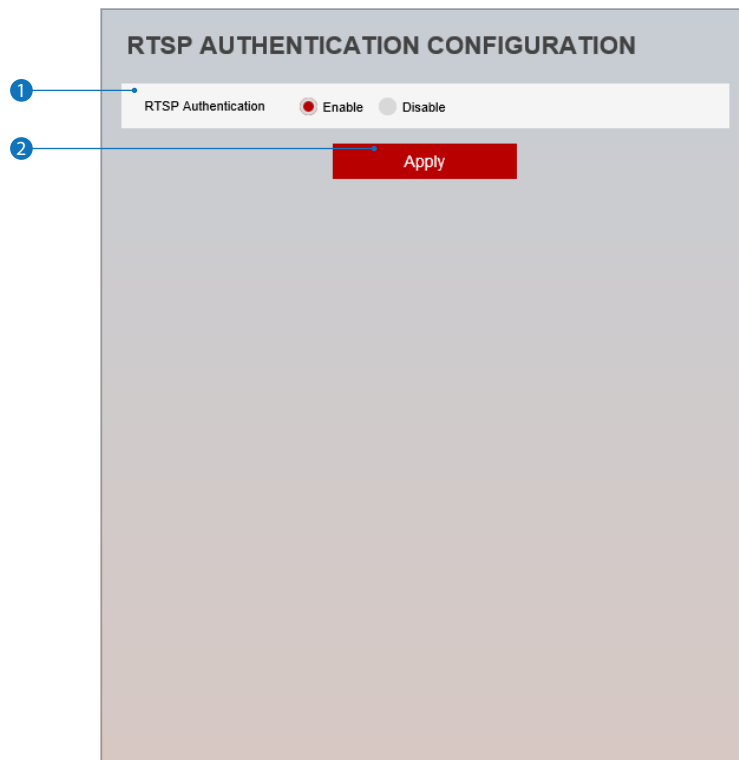

1 **RTSP Authentication** - RTSP Authentication can be enabled or disabled. When running older versions of VIGIL Server with Gen III VISIX Cameras, RTSP Streams may be required. Always disable RTSP Authentication in this case before entering the RTSP URL for the cameras in the VIGIL Server Network Camera settings.

2 Click **Apply** to save new settings.

Setup - Security Setup

IEEE 802.1X Configuration

IEEE 802.1X CONFIGURATION

General Setting

1 IEEE 802.1x On Off

2 Protocol MD5

3 EAPOL version 1

4 ID

5 Password

6 Retype Password

7 CA Certificate NONE

8 Certificate NONE

9 Apply

The feature is needed when connecting the camera to the network protected by the IEEE 802.1X.

- 1 IEEE 802.1x - The IEEE 802.1x feature can be enabled or disabled here.
- 2 **Protocol**
 - MD5: Provides one-way password-based network authentication of the client.
 - PEAP : Similar TTLS in that it does not require a certificate on the client side.
 - TTLS / MD5 : It does not require a certificate on the client side.
 - TLS : It relies on client-side and server-side certificates to perform authentication.
- 3 **EAPOL Version** - Select the EAPOL Version.
- 4 **ID** - Type the ID to identify the client in the IEEE 802.1X authentication server.
- 5 **Password** - Type the Password to identify the client in the IEEE 802.1X authentication server.
- 6 **Verify** - Verify Password.
- 7 **CA Certificate** - Select the CA certificate required for TLS, TTLS, and PEAP authentication.
- 8 **Certificate** - Select the client certificate required for TLS authentication
- 9 Click **Apply** to save new settings.

Setup - Security Setup

HTTPS Configuration

HTTPS CONFIGURATION

1. If no certificates are available go to certificates to manage.

Certificates

Certificate	NONE
-------------	------

HTTPS connection Policy

WEB	HTTP and HTTPS
ONVIF	HTTP
RTSP OVER HTTP	HTTP


Apply

HTTPS encrypts session data over SSL or TLS protocols instead of using plain text in socket communications.

- 1 Certificate** - Select an installed certificate.
 - ⊗ If you can not select a certificate, please install the certificate from the Security->Certificates menu.
- 2 HTTPS connection Policy** - Select one of "HTTP", "HTTPS", "HTTP and HTTPS" depending on the connected web, ONVIF, RTSP over HTTP.
 - WEB : "HTTP" "HTTPS" "HTTP and HTTPS"
 - ONVIF, RTSP OVER HTTP : "HTTP" "HTTPS" "HTTP and HTTPS"
- 3 Click Apply** to save new settings.
 - ⊗ When HTTPS mode is chosen, input `https://<IP Address>` to connect to the camera.

Setup - Security Setup

Certificates Configuration

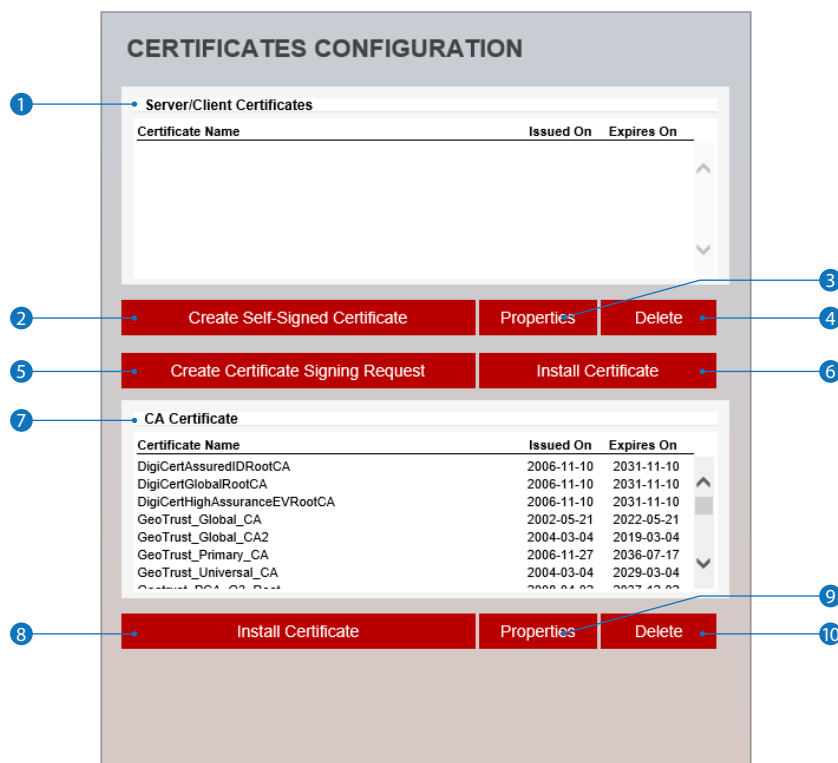

- 1 **Server/Client Certificates** - Shows the installed certificates.
- 2 **Create Self-Signed Certificate** - A self-signed SSL certificate is an identity certificate signed by its own creator. These are considered to be less trustworthy.
- 3 **Properties** - Shows information about the selected certificate.
- 4 **Delete** - Delete the selected certificate.
- 5 **Create Certificate signing request** - This is the encoded data that contains the necessary information for issuing the certificate.
 - ⚠ They must be filled in when creating the CSR (Certificate Signing Request).
- 6 **Install Certificate** - Install Certification
- 7 **CA Certificate** - Shows the installed CA certificates.
- 8 **Install CA Certificate** - Install Certification. See the Details page.
- 9 **Properties** - Shows information about the selected certificate.
- 10 **Delete** - Delete the selected CA certificate.

Setup - Security Setup

Certificates Configuration

Detail for Install Certification.


- 1 **Certificate From Signing Request** - Select to install signed certificate returned from the CA.
- 2 **Certificate And Private Key** - Select to install Certificate And Private Key to install a certificate and private key.
- 3 **Certificate Name** - Enter a unique name to identify certificate.
- 4 **Select File** - Choose certification file.
- 5 **OK** - Request installing certificate.
- 6 **Cancel** - Cancel install certificate and return back to certificates configuration.

Detail for Install CA Certification.

- 7 **Certificate Name** - Enter a unique name to identify CA certificate.
- 8 **Select File** - Choose CA certification file
- 9 **OK** - Request installing CA certificate.
- 10 **Cancel** - Cancel install CA certificate and return back to certificates configuration.

Setup - Security Setup

Service Configuration

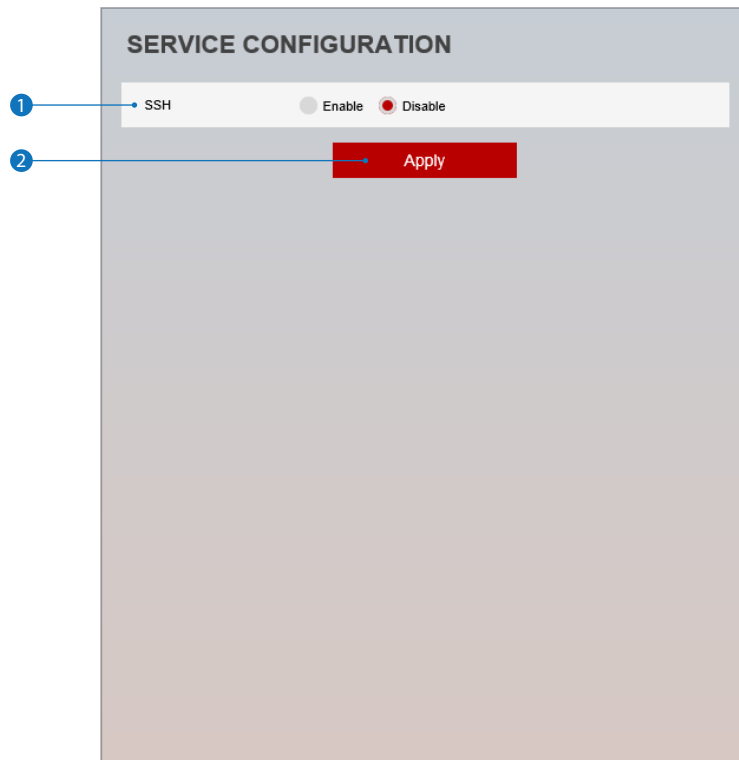

- 1 SSH - The SSH function can be enabled or disabled here.
- 2 Click **Apply** to save new settings.

Setup - System Setup

System Information


SYSTEM INFORMATION	
Device Name	IP-Camera
Location	unknown
Apply	
Model Name	NDE0-SLAH9
Manufacturer	IPNC
Max Resolution	3008 x 3000
Max Framerate	30 fps
Photo Resistor(CDS)	SUPPORT
Alarm In	SUPPORT
Relay out	SUPPORT
Audio	SUPPORT
Optical Zoom	NOT SUPPORT
Digital Zoom	NOT SUPPORT
PTZ	NOT SUPPORT

System Information is displayed here.

- 1 **Device Name** - Enter the device name.
- 2 **Location** - Shows camera's location.
- 3 Click **Apply** to save new settings.

Setup - System Setup

System Diagnostics

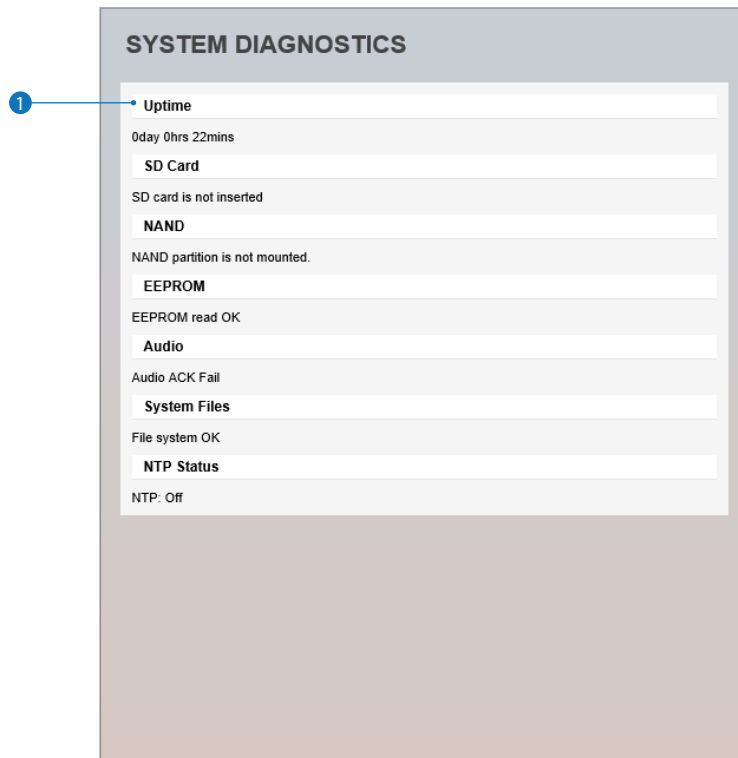


Shows basic hardware functions after inspection.

1 Shows Uptime, SD card, NAND, EEPROM, Audio chip, Important file system and NTP Status.


⚠ Warning:

If the camera is abnormally terminated, a download button will appear on the diagnostics page to download a file that allows you to check the error information log. .



Setup - System Setup

Firmware Update

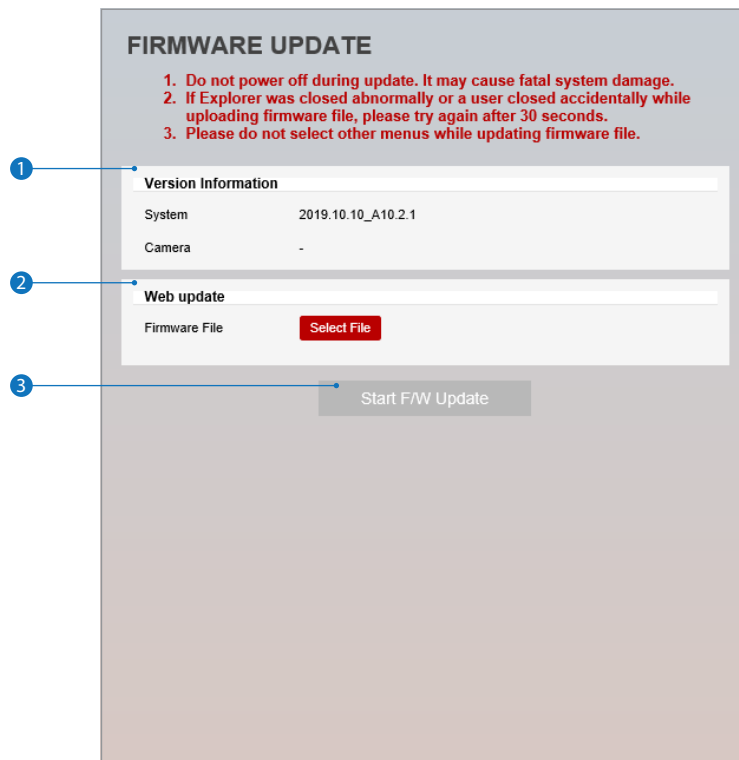

- 1 **Version Information** - Shows the current Firmware Version in the system.
- 2 **Web Update** - Select the Firmware file to update to on your computer by clicking **Select File**.
- 3 **Start F / W Update** - Click this button to start update. Progress of uploading will be displayed using a progress bar. If you assign the wrong file name, an error message will be shown.

⚠ Warning:

1. Do not turn off the power of camera during the Firmware update. Otherwise, the system can hang and the device may become unusable. If updating is finished, the system will be rebooted automatically.
2. Please make sure to check the 'Notice' shown on screen.
If firmware update is completed, the camera will reboot automatically and 'Setup window' will be closed.

Setup - System Setup

Date & Time Settings

The screenshot shows the 'DATE&TIME SETTINGS' interface. It is divided into several sections:

- 1 TimeZone Setup:** A dropdown menu for 'TimeZone' is set to '(GMT 00) Greenwich Mean Time, Lisbon, London'. A red 'Apply' button is below it.
- 2 Time Format:** A dropdown menu for 'Time Format' is set to 'yy-mm-dd'. A red 'Apply' button is below it.
- 3 Current Date & Time:** A section showing the current date and time as '2005-01-02 04:44:59'.
- 4 New Camera Date & Time:** A section with two radio buttons: 'Synchronize with my computer' (unselected) and 'Setup manually' (selected). Below 'Setup manually' are fields for 'Date' (2005-01-01) and 'Time' (00:00:00).
- 6 Synchronize with time server (NTP):** A radio button (unselected) for 'Synchronize with time server (NTP)'. Below it is a dropdown for 'NTP Server' set to 'time-a.nist.gov'.
- 7:** A red 'Apply' button at the bottom of the settings area.

- 1 TimeZone Setup** - Choose the TimeZone for camera. It will be activated after clicking 'Apply' button.
 - ⚠ Prior to setting below 'New Camera Date & Time', always set the correct Timezone first.
- 2 Time Format** - Select the time format: yy-mm-dd or mm/dd/yy.
- 3 Current Date & Time** - Shows the current date and time setting in the camera.
- 4 Synchronize with my computer** - Set the date / time using those of the currently connected PC.
- 5 Setup manually** - Set the date / time by typing manually.
- 6 Synchronize with time server (NTP)** - Choose time server available to connect to the camera. Date & Time will be updated automatically every hour when connected.
- 7** Click **Apply** to save new settings.

Setup - System Setup

DST Settings


The screenshot shows the 'DST SETTINGS' configuration page. It is divided into two main sections: 'General Setting' and 'Date&Time Settings'. The 'General Setting' section has a radio button for 'Off' (selected) and a radio button for 'On'. The 'Date&Time Settings' section has two rows: 'Start Time' and 'End Time'. Each row has four dropdown menus: the first for the month (set to 'Jan'), the second for the occurrence (set to 'First'), the third for the day of the week (set to 'Sun'), and the fourth for the time (set to '0'). Both rows also have an 'o'clock' label. A red 'Apply' button is located at the bottom of the form. Three blue callout boxes with numbers 1, 2, and 3 point to the 'General Setting' section, the 'Date&Time Settings' section, and the 'Apply' button, respectively.

Daylight Saving Time (DST) is the practice of setting the clocks forward one hour from standard time during the spring and summer months, and back again in the fall and winter in order to make better use of natural daylight.

- 1 **General Setting** - DST function can be enabled or disabled here.
- 2 **Date&Time Settings** - Set the Start time and end time for DST.
- 3 Click **Apply** to save new settings.

Setup - System Setup

Users Management

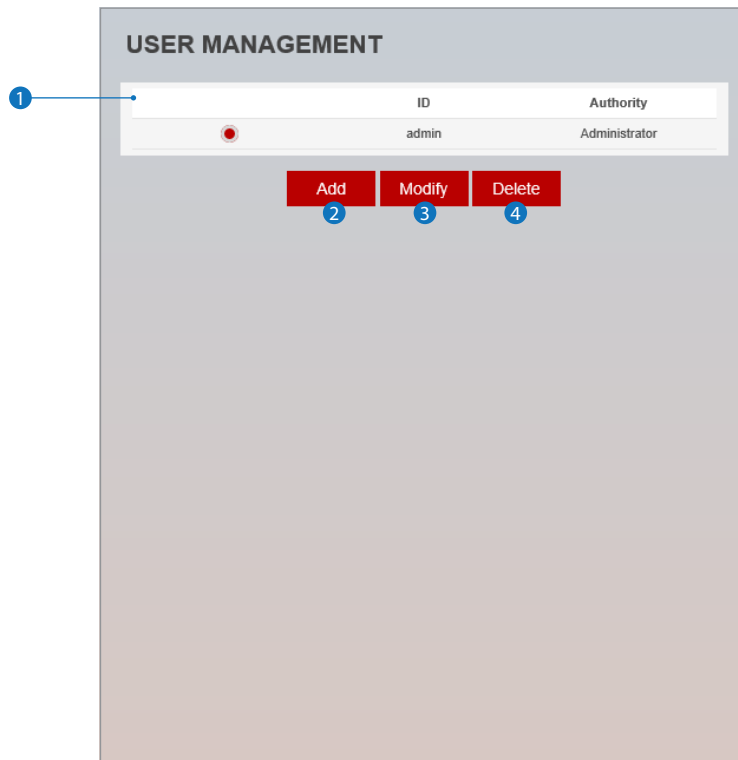

1 **Users** - List all the user accounts for the camera.

2 **Add** - Register a new user.

ID	Enter a new user ID (admin exists by default).
Password	Enter the user password.
Verify	Enter the user password again for verification.
User Authority	Select Operator or Viewer. Viewer : Only monitoring is allowed. Operator : Most of the functions are allowed except 'Setup'.

⚠ The ID is limited to 4~30 characters.

⚠ **[Password Rules]**

Weak : 8 characters or less, less than 2 combinations

Good : more than 8 characters, more than 3 combinations

strong : more than 12 characters, 4 combinations

⚠ If deemed 'Good' or better, you can change your password.

Combinations : uppercase letters, lowercase letters, numbers, special symbols.

Acceptable special characters are ~ ' ! & ^ () _ - | { } ; . ? /.

Click **Apply** to save new settings.


⚠ Click 'Cancel' to return to the previous menu.

3 **Modify** - Modify user account info. For the *admin* account, only password function can be modified.

4 **Delete** - Delete the selected user account. Admin account cannot be deleted.

Setup - System Setup


System Log

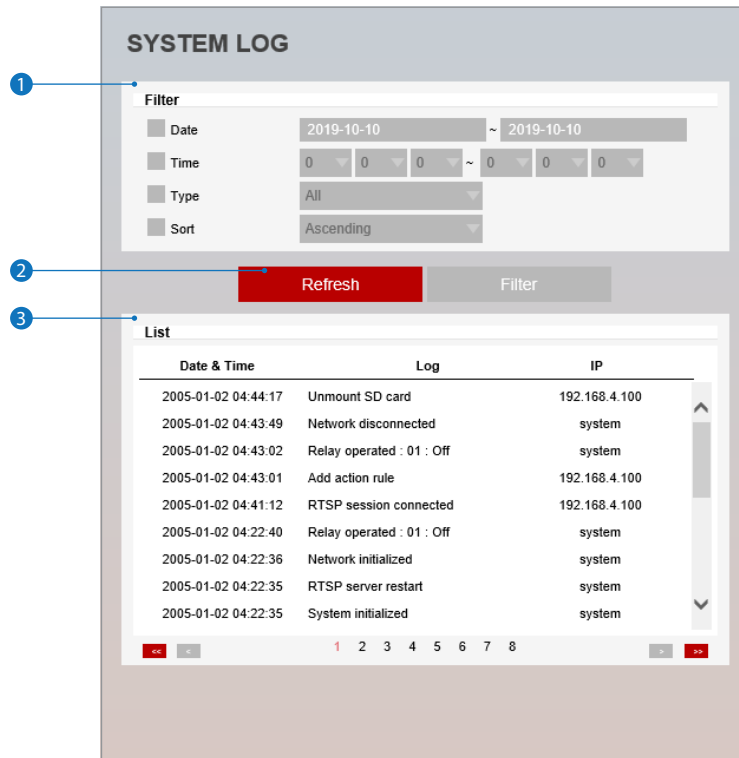

- 1 **Filter** - Select a date, time, sort or type of log to filter the log.
- 2 Click the 'Refresh' button to refresh the log list.
 - ⌘ Click 'Filter' to view the filtered log.
- 3 **System Log List** - The filtered log is displayed.

Setup - System Setup


Language

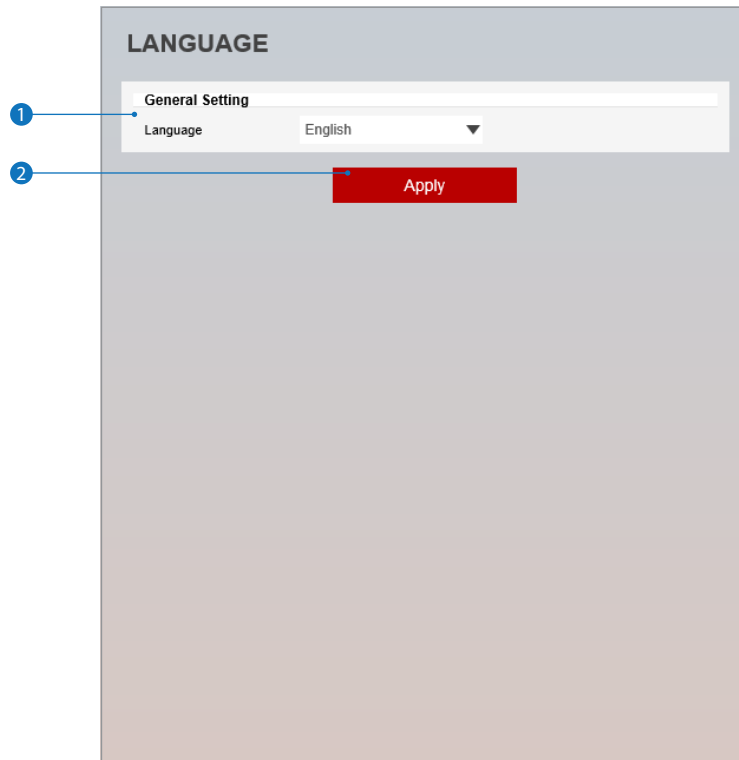

- 1 **Language** - Select the language for the camera interface from the menu.
- 2 Click **Apply** to save new settings.

Setup - System Setup

Factory Reset

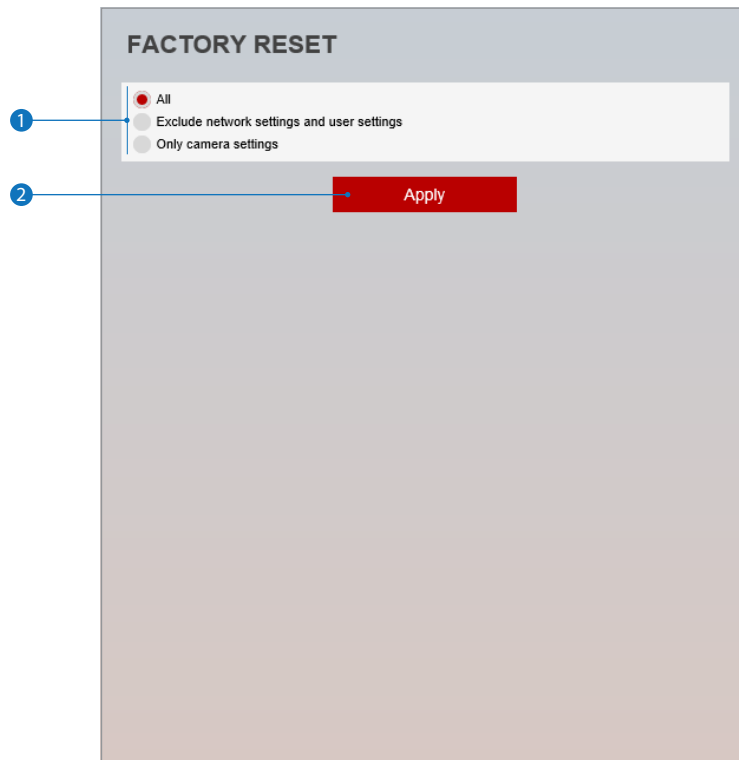


1 Reset to the factory defaults - Return the camera settings to their factory default state.

-
- **All** - Reset all Settings to the factory defaults.
 - **Except Network Settings and User Settings** - Reset all setting to defaults except network and user settings.
 - **Only Camera Settings** - Reset only camera related settings to their factory defaults.
-

2 Click **Apply** to save new settings.

Setup - System Setup

Restart

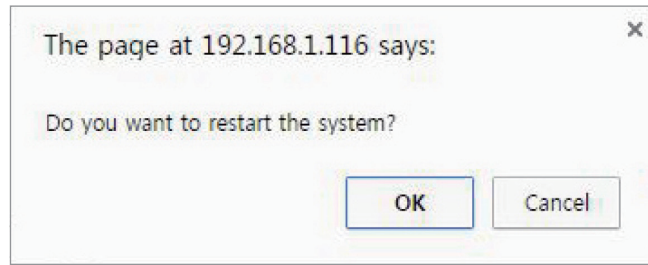

If you click the 'RESTART' menu, a message box will be shown to confirm a camera system restart. Click the 'OK' button to restart. You will be logged out and will require a relogin to continue setup and settings configuration.

Setup - System Setup

System Open Source License

Open Source Name	Version	License
busybox	1.24.1	GPLv2
alsa-lib	1.1.2	GPLv2.1
libglib2	2.47.1	LGPLv2
libgnutls	3.4.11	LGPLv2.1
libjson-c	0.11-20140402	JSON License
libcurl	7.50.1	MIT/X derivate License
libffi	3.1	MIT License
libgcrypt	1.6.1	LGPLv2.1
libnl	3.2.24	LGPLv2.1
libogg	1.3.1	BSD-style License
libsamplerate	0.1.8	GPLv2
libselinux	2.3	Public domain
libsndfile	1.0.25	LGPLv2.1
libssh2	1.6.0	BSD
libtasn1	4.8	GPLv3

This menu will show you all the list of System Open Source Licensees used in the camera. Open Source Name / Version / License is displayed.

Setup - PTZ Setup

PTZ Settings

PTZ SETTINGS

1 Parking Action

Mode Enable Disable

Wait Time Seconds(s)[5 ~ 14400]

Action

Preset

Preset Tour

2 Apply

3 Power Up Action

Mode Enable Disable

Action

Preset

Preset Tour

4 Apply

5 AutoFlip & Digital Zoom

AutoFlip Enable Disable

Digital Zoom Enable Disable

6 Apply

PTZ Settings are only available for applicable models.

- 1** **Parking Action** - Set the action for the camera to take when the PTZ control of the camera is not in use.
 - Wait Time : Set the wait time (5sec ~ 14400sec). The camera will be considered idle after the set amount of time transpires with no PTZ inputs detected.
 - Action : Set the action to perform if there is no PTZ operation during the wait time. (HomePosition / Preset / Preset Tour)
 - Preset : If the Action is set to a preset, select the preset number here. Presets must be constructed and added from the main viewer.
 - Preset Tour : If the Action is set to a preset tour, it can be selected here. Preset Tours can be constructed and added from the main page.
- 2** Click **Apply** to save new settings.
- 3** **Power Up Action** - Set the action for PTZ to take when the camera comes online.
 - Action : Set the action (HomePosition / Preset / Preset Tour)
 - Preset : If the Action is set to a preset, select the preset number here. Presets must be constructed and added from the main viewer.
 - Preset Tour : If the Action is set to a preset tour, it can be selected here. Preset Tours can be constructed and added from the main page.
- 4** Click the 'Apply' to make above setting effective.
- 5** **AutoFlip & Digital Zoom**
 - **AutoFlip** : This is a function that enables continuous pan by converting PTZ to 180 degree panoramic instantly.
 - **Digital Zoom** : Enable this to allow Digital zoom.
- 6** Click **Apply** to save new settings.

3xLOGIC

Simple. Scalable. Secure.